

Figure 2

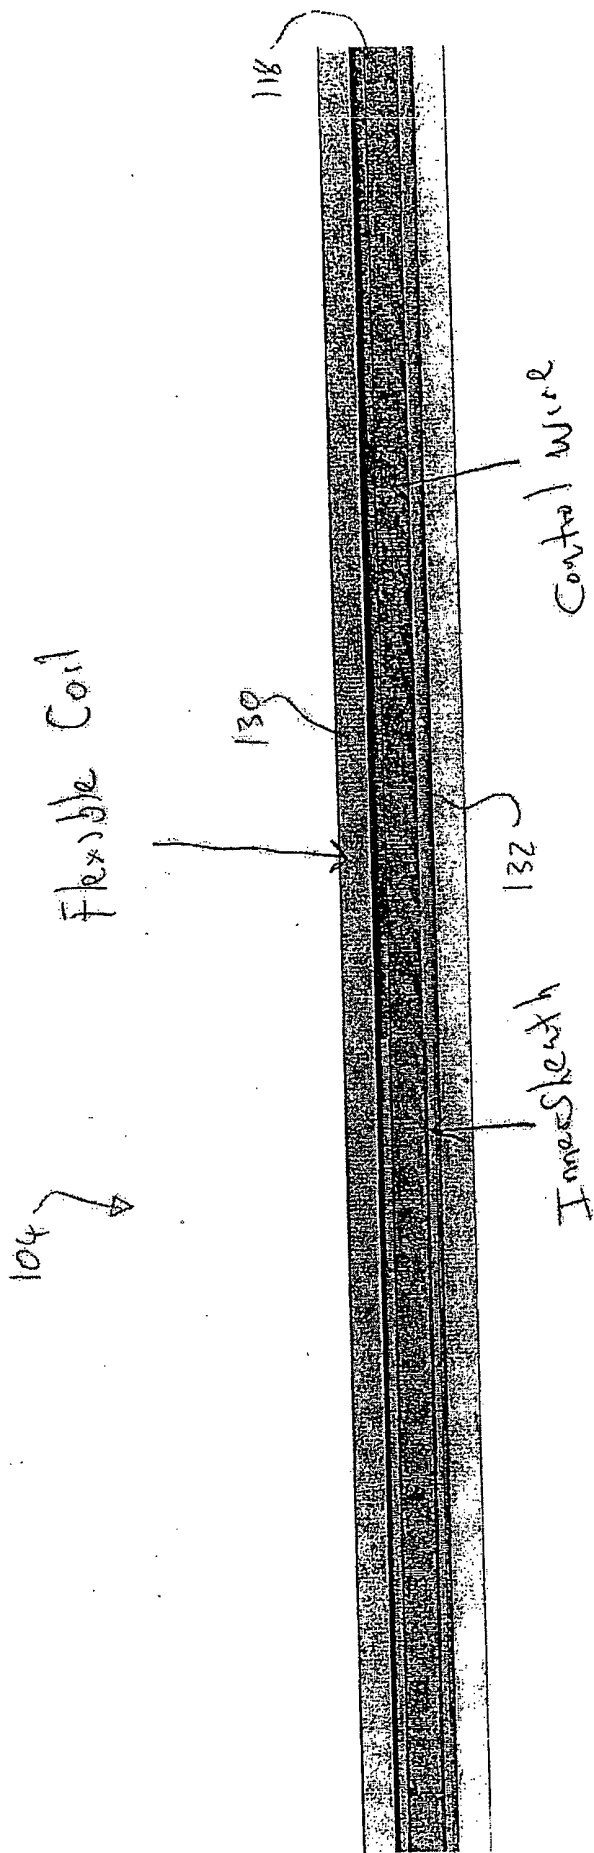


FIGURE 3

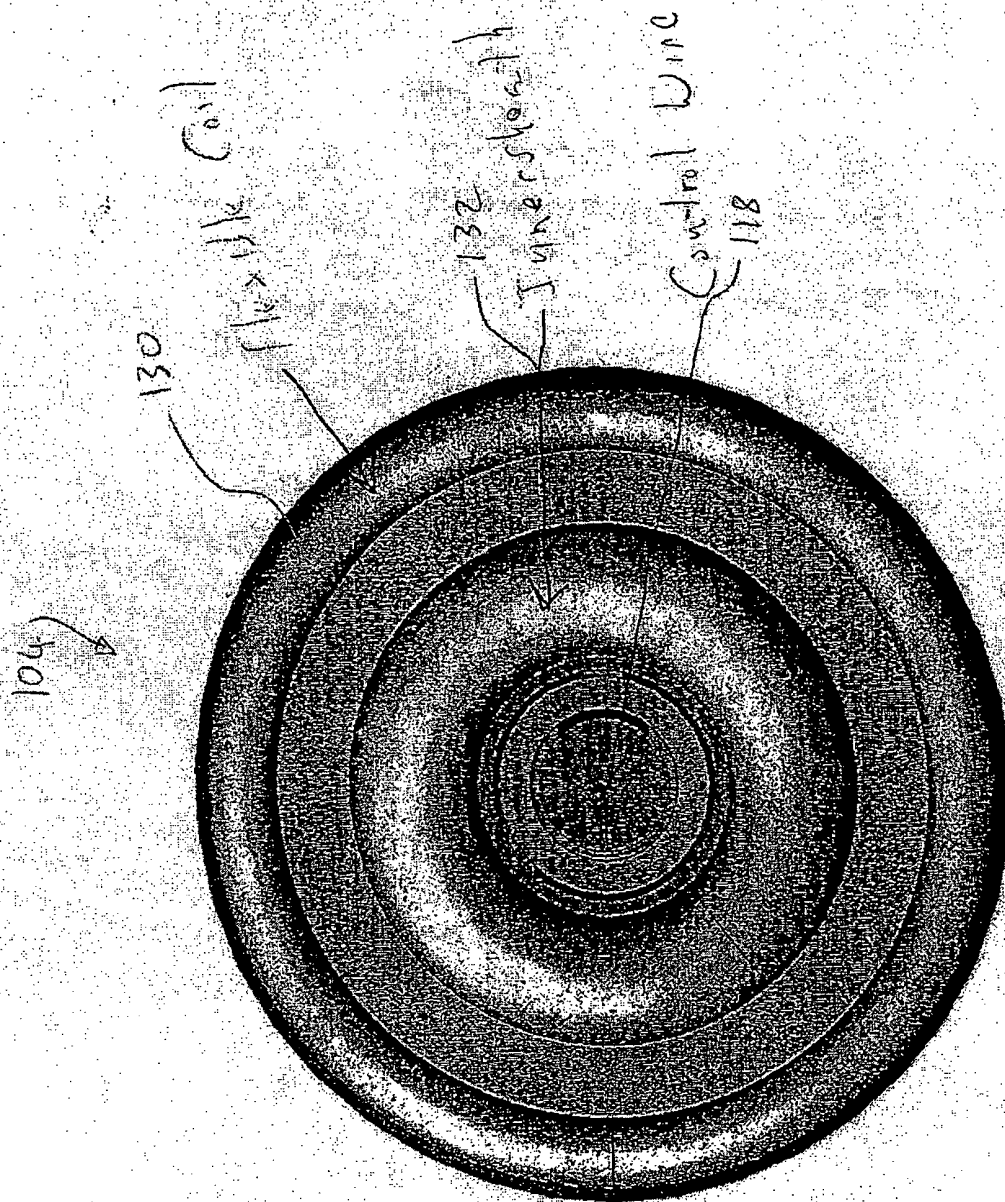


FIGURE 4

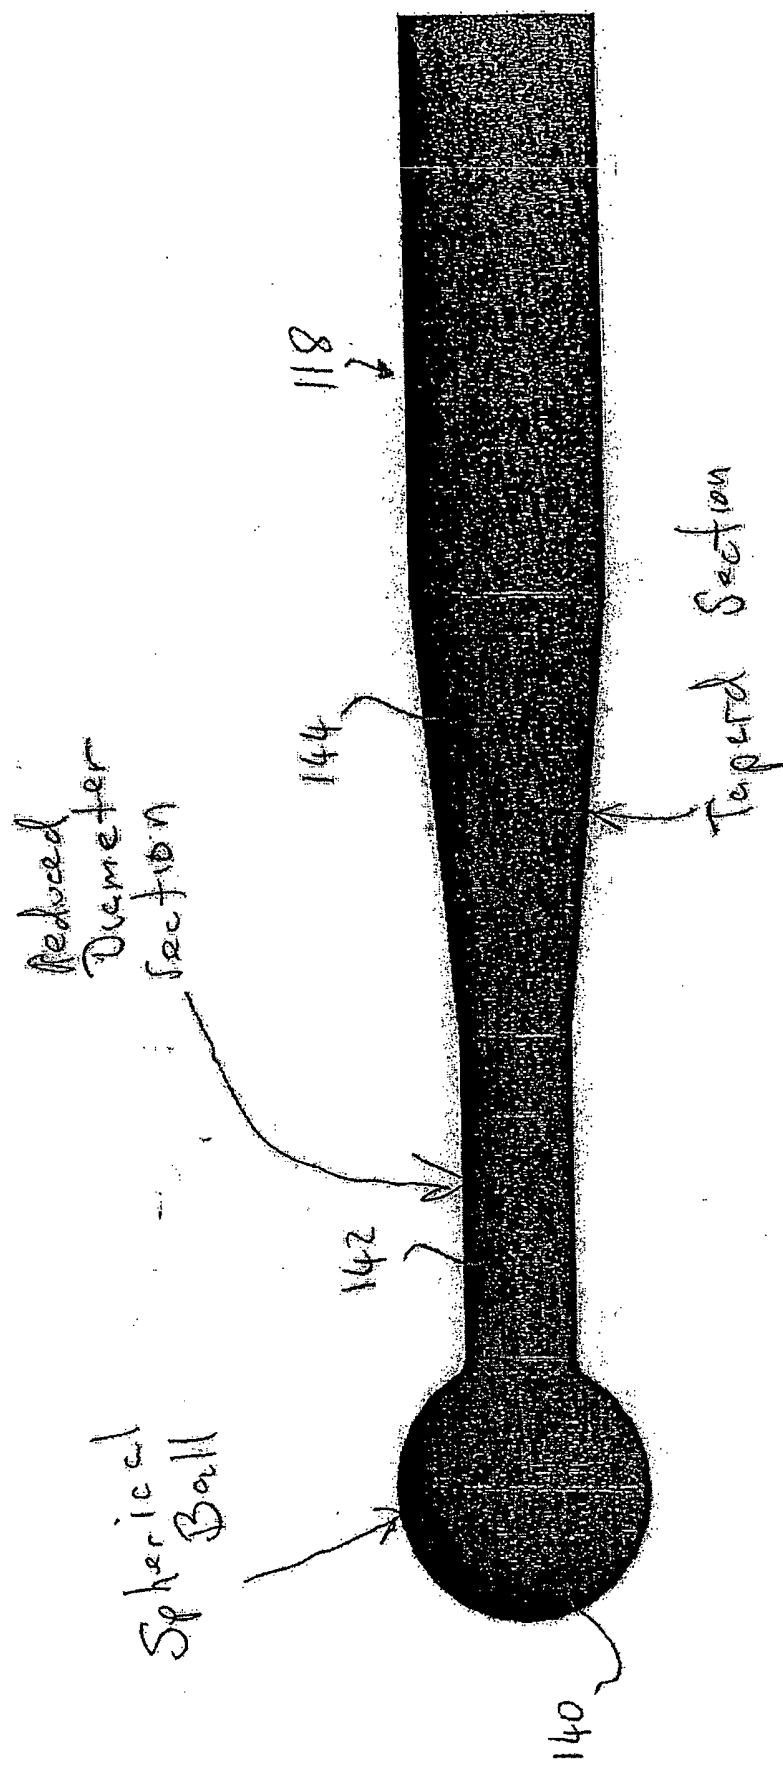


FIGURE 5

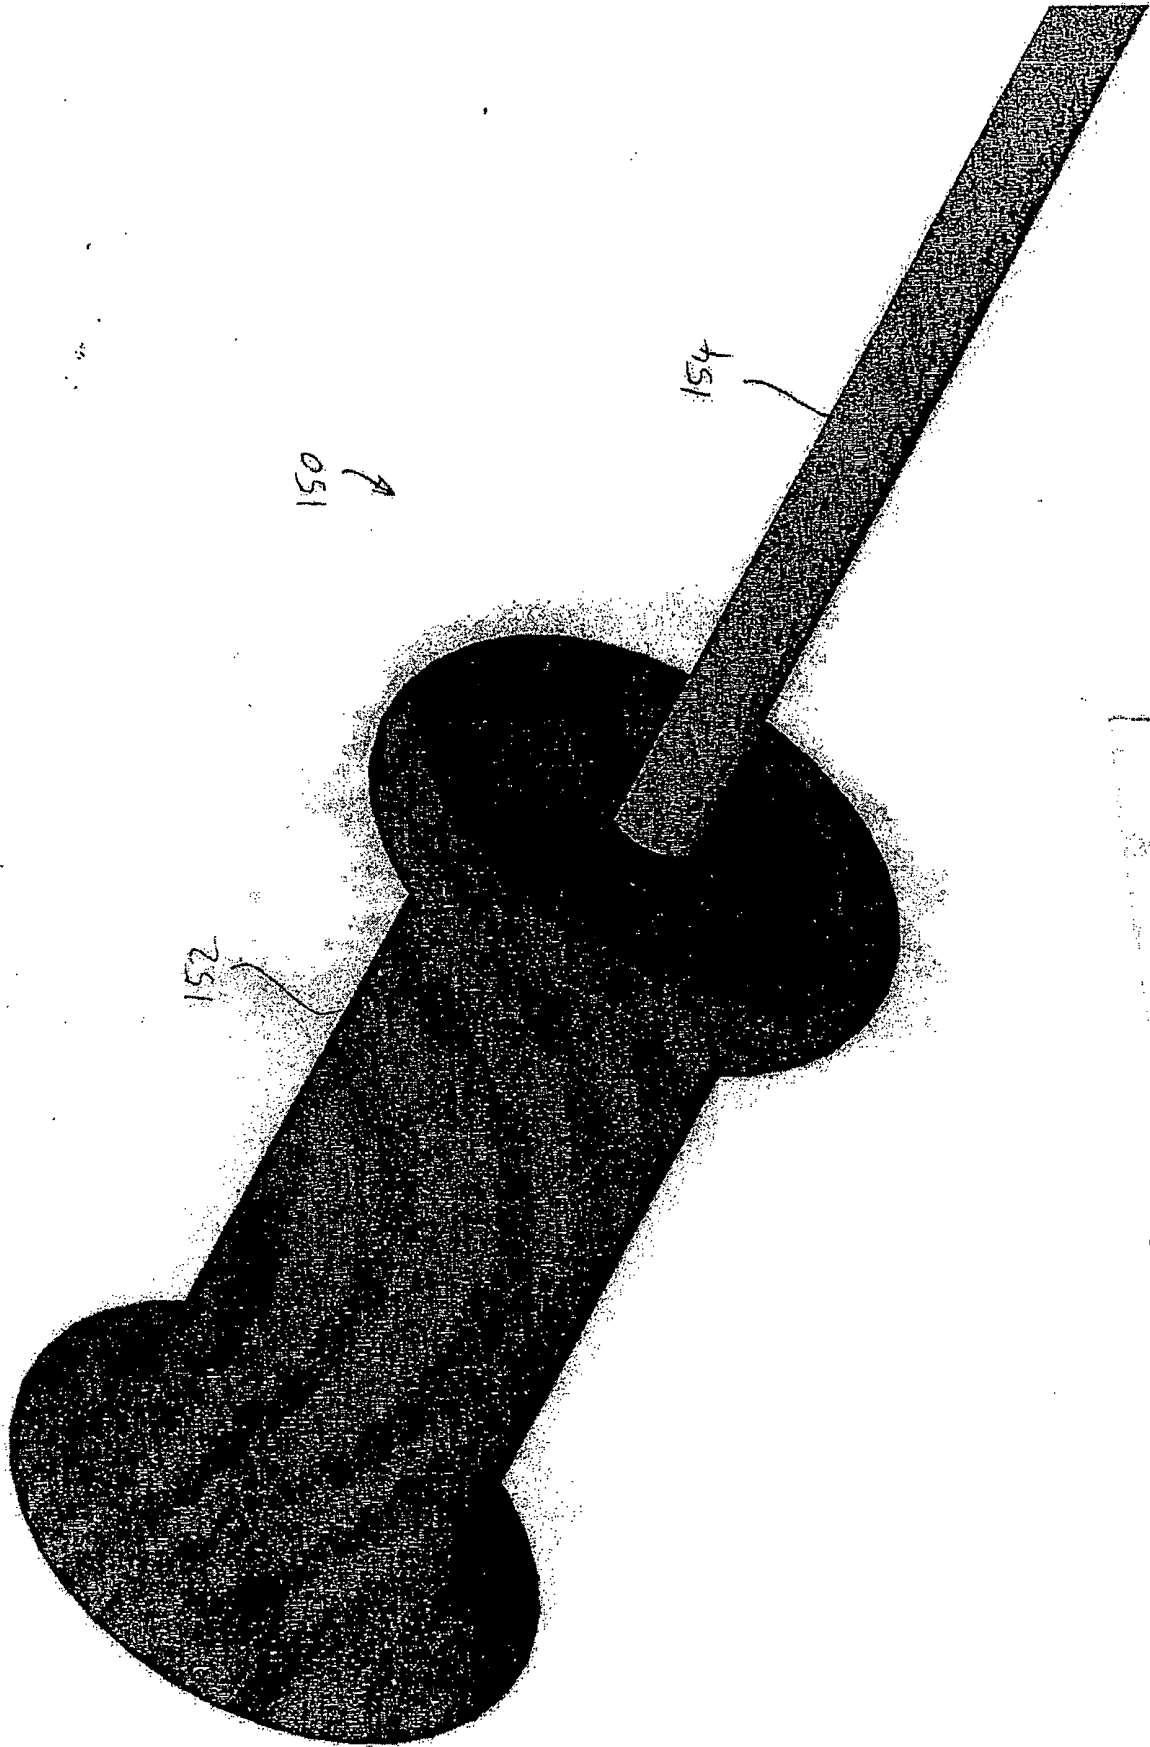


FIGURE 6

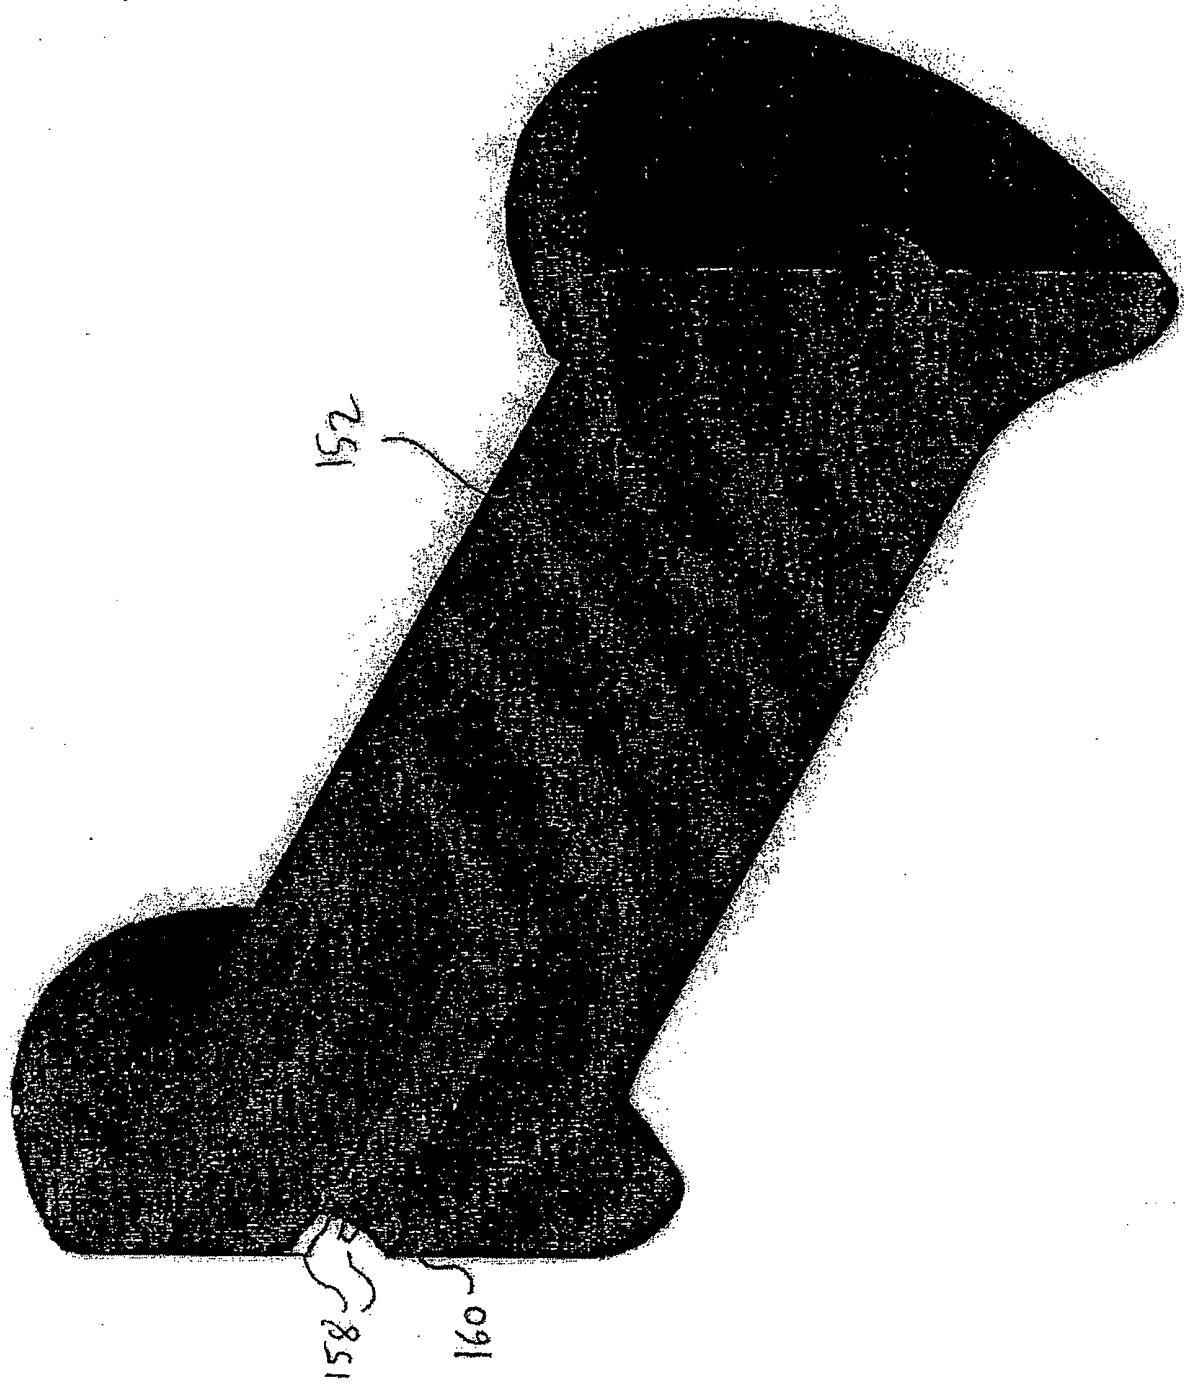
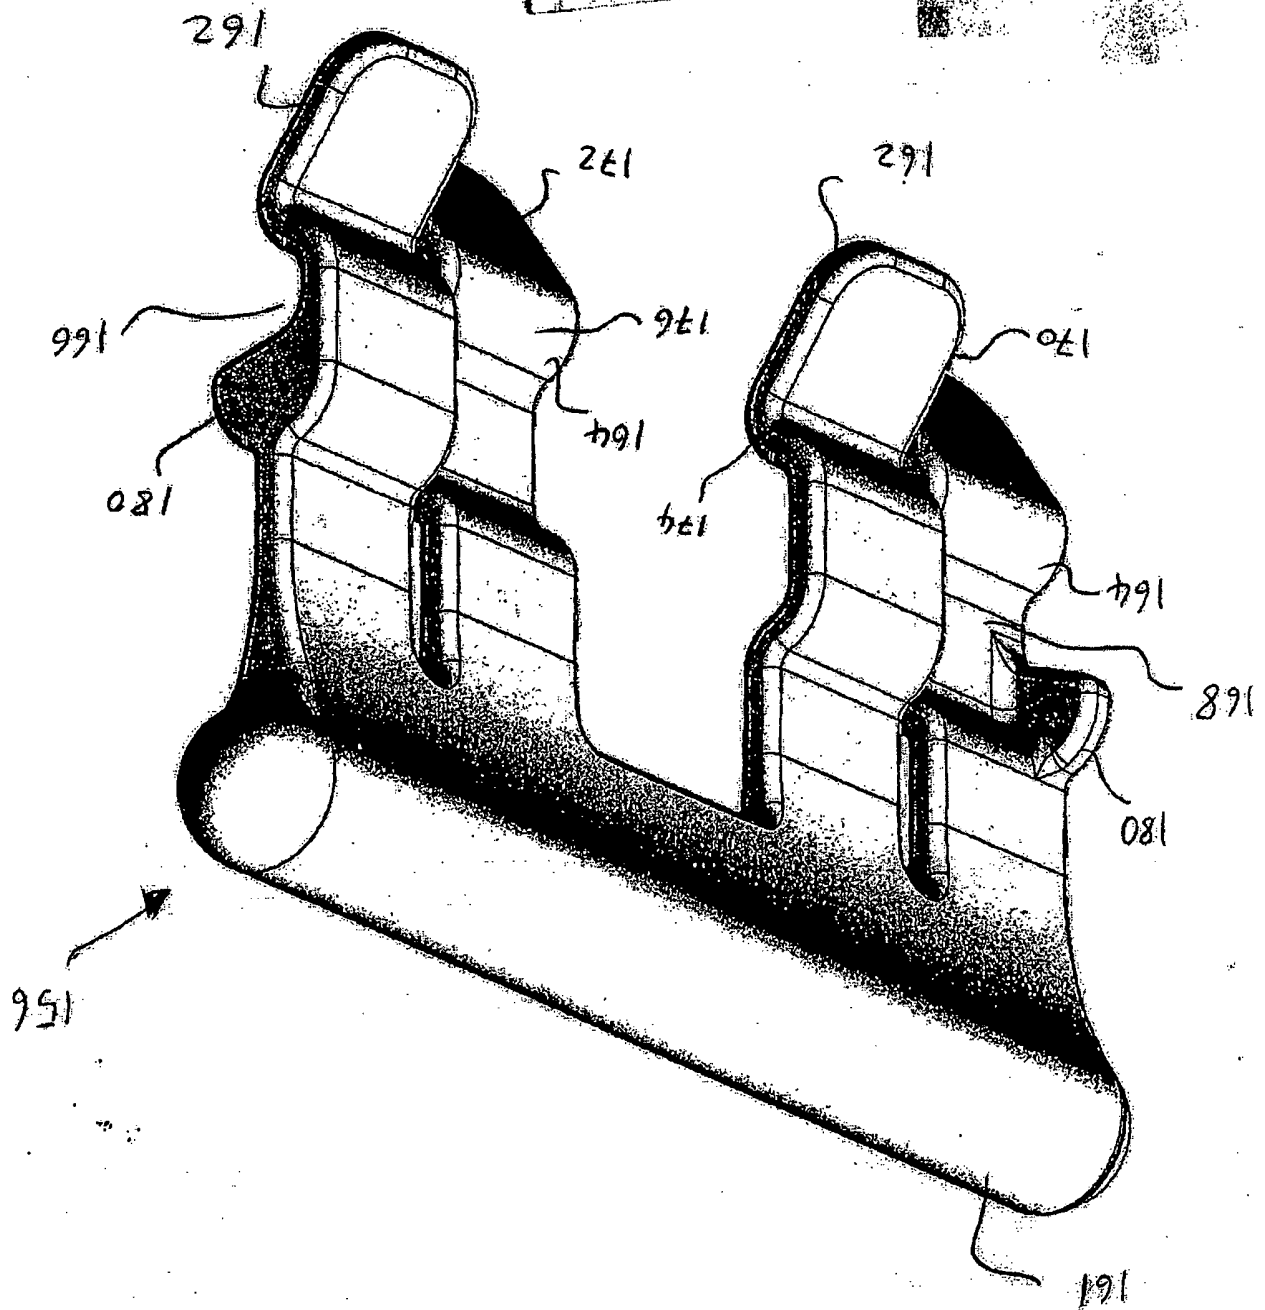


FIGURE 7

FIGURE 8





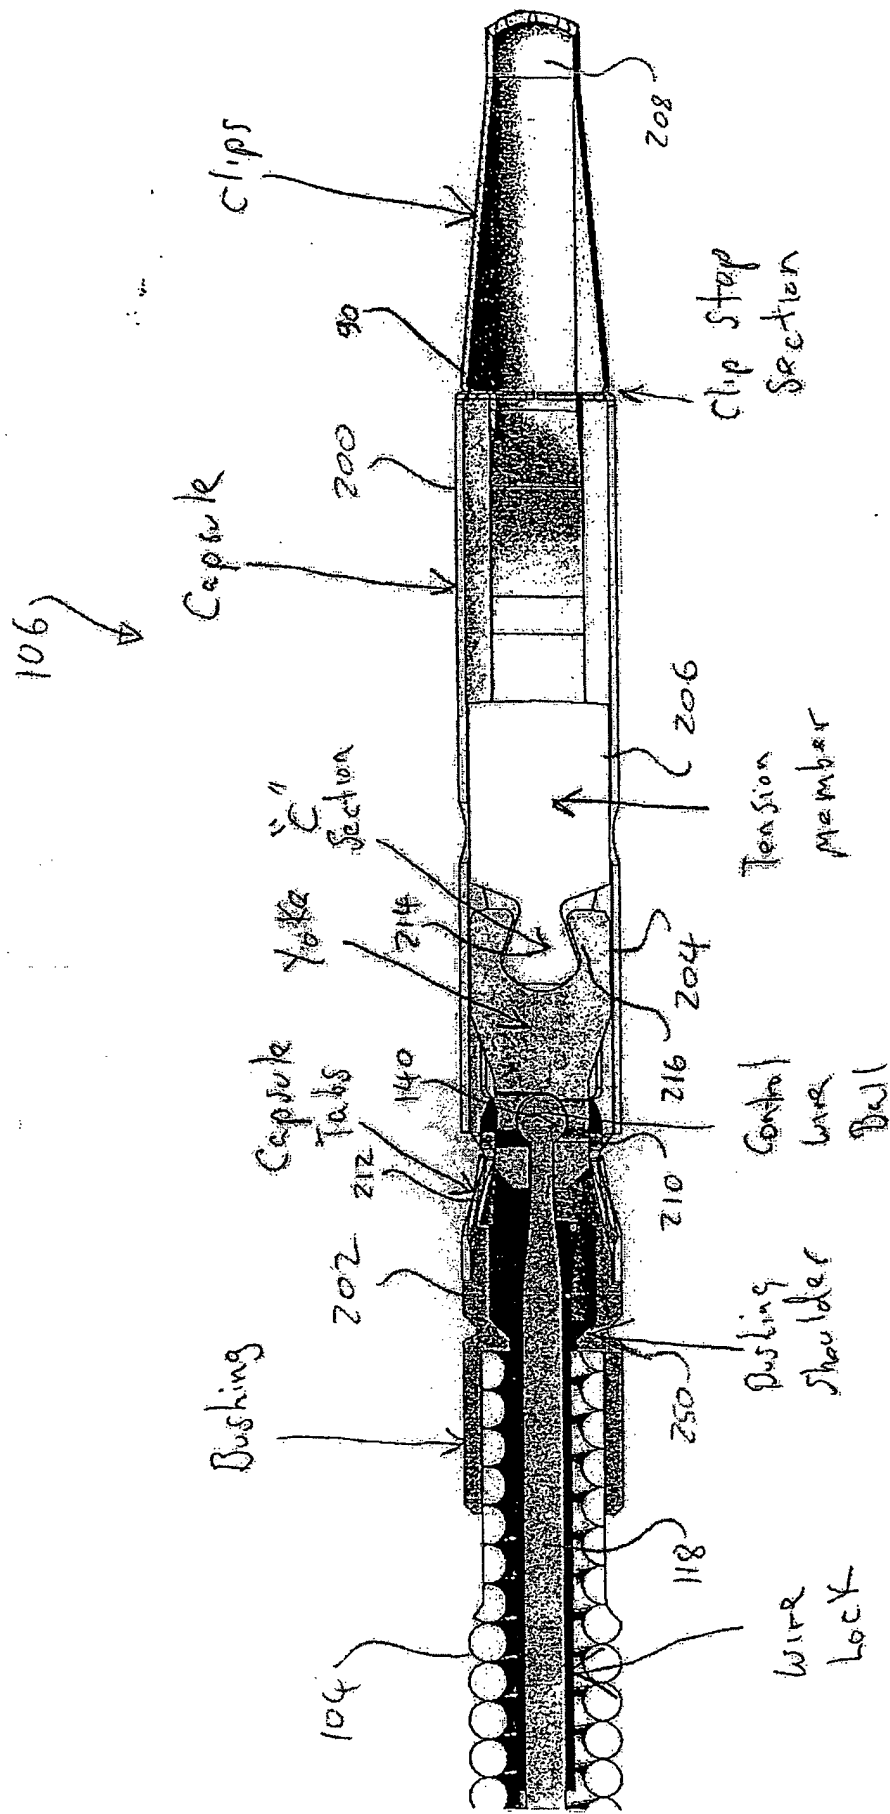


FIGURE 9

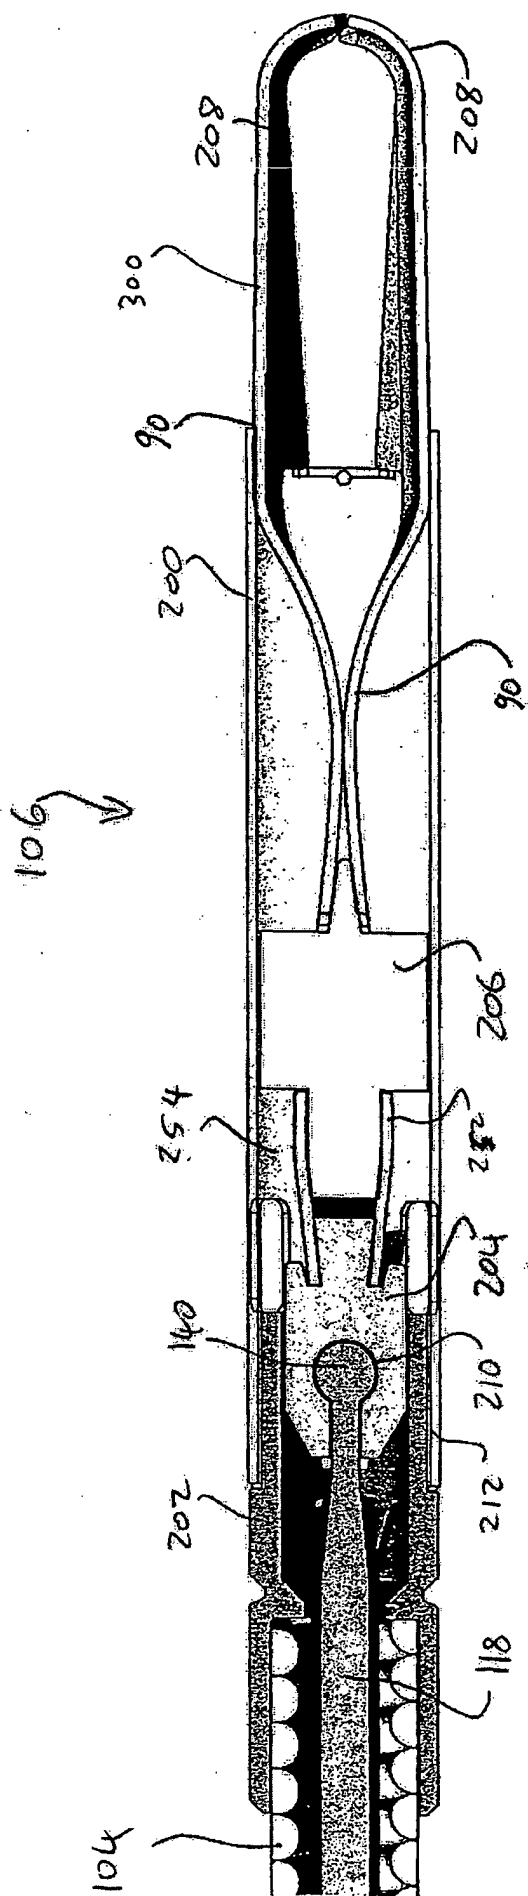


FIGURE 10

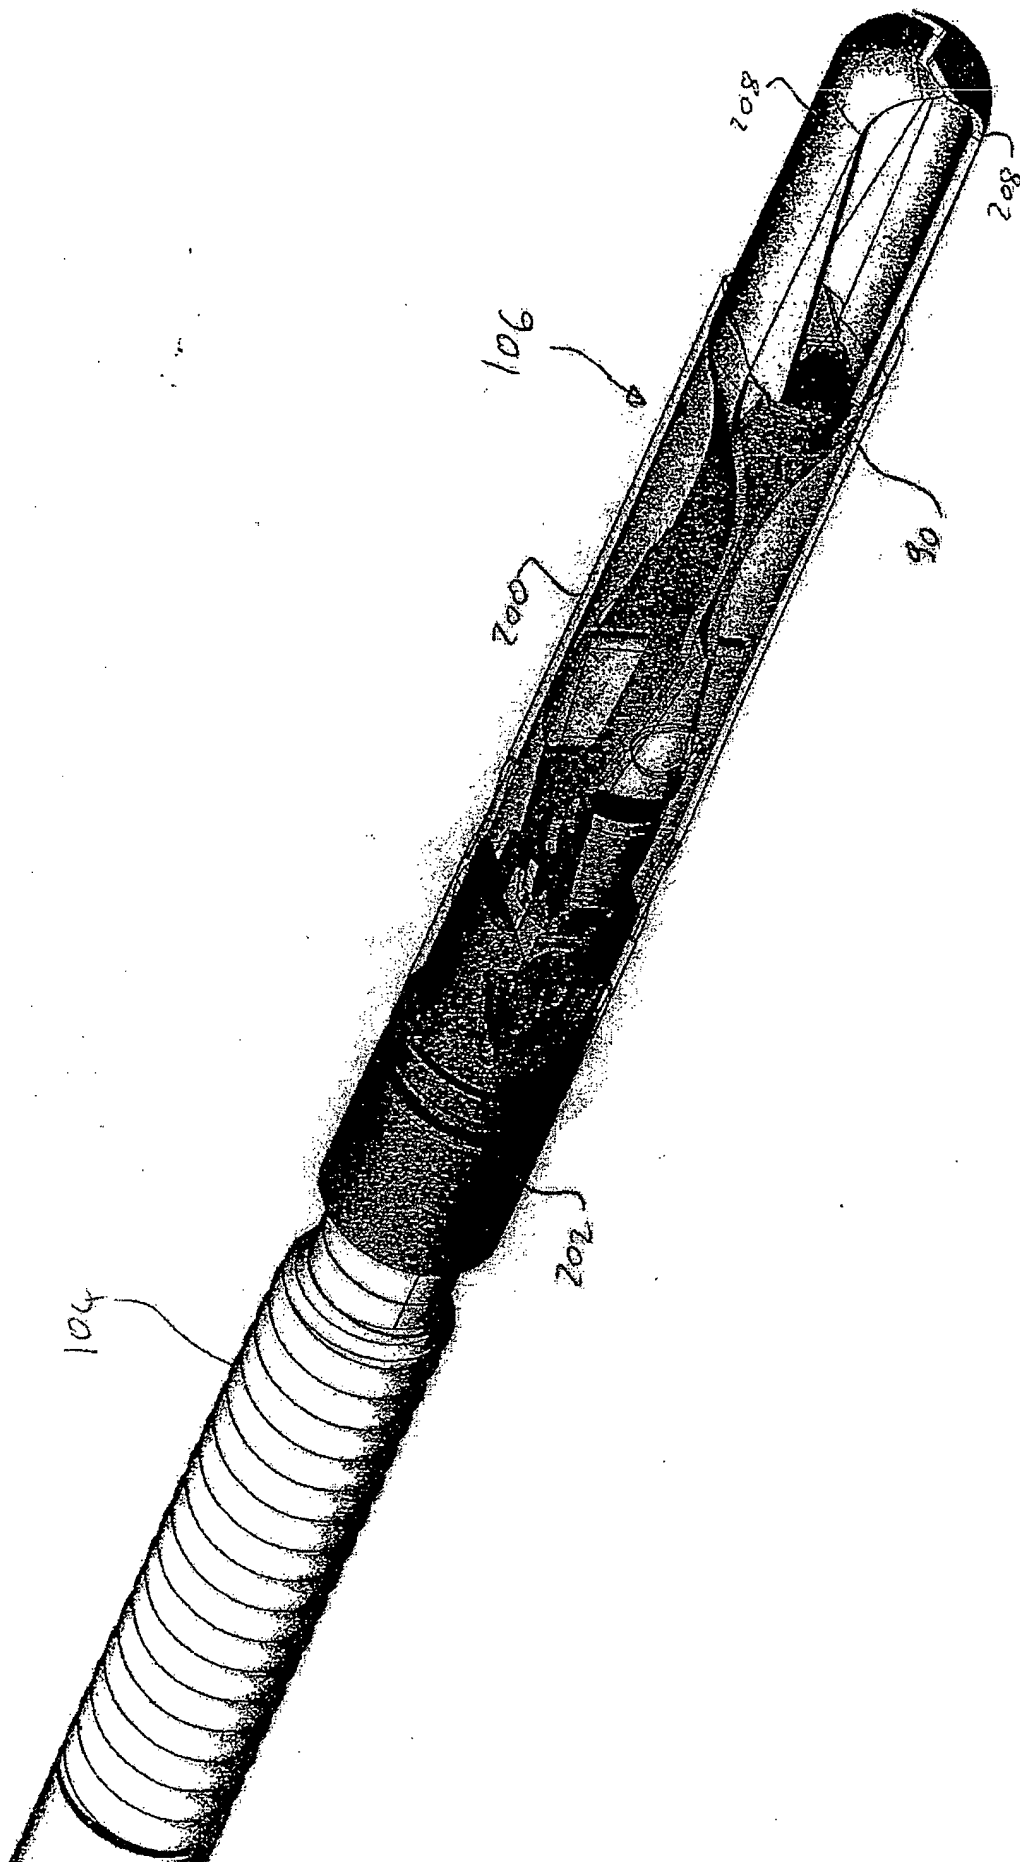


FIGURE 11

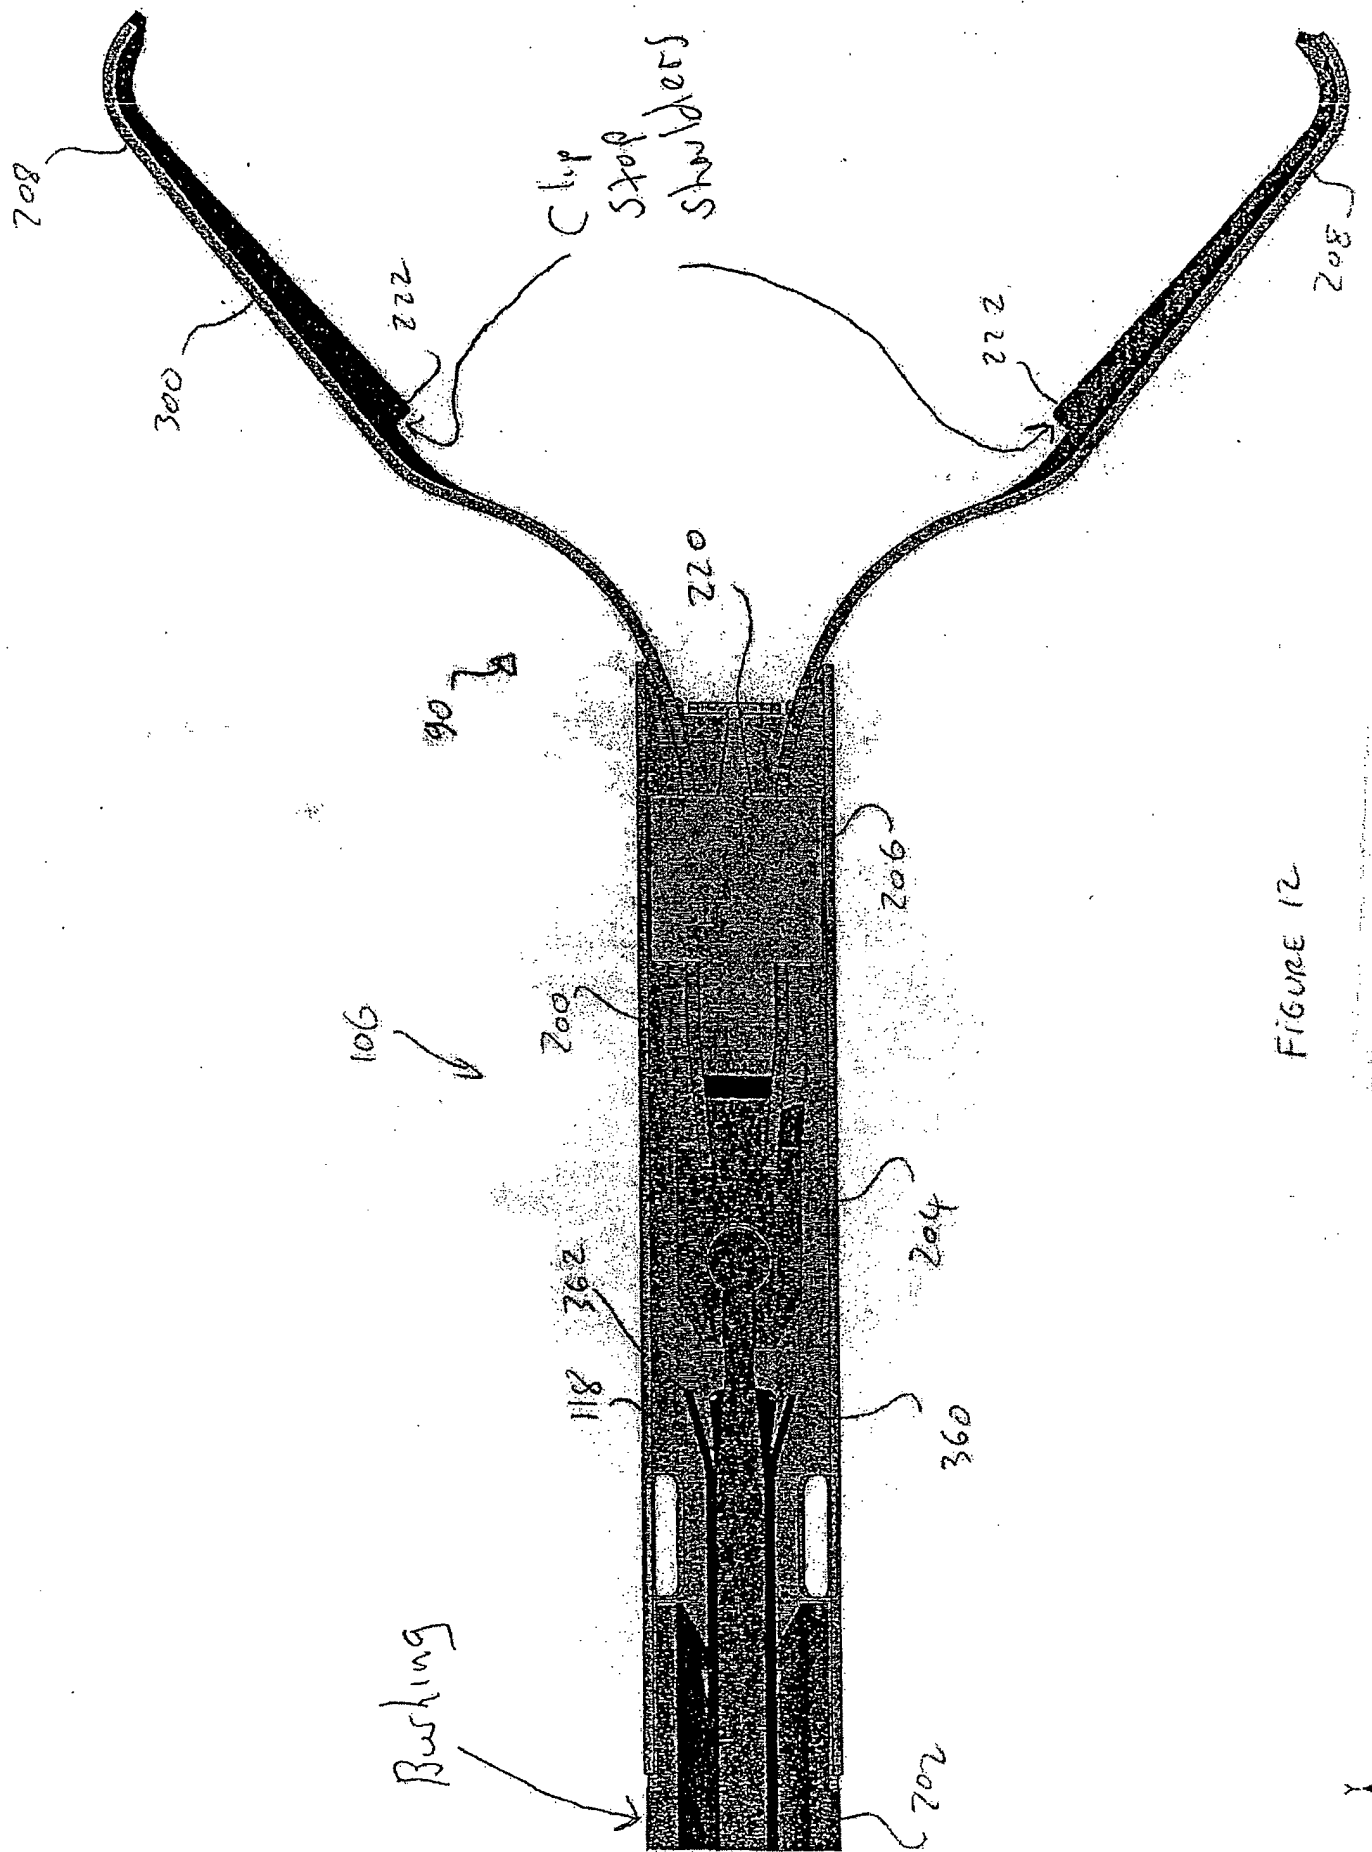


FIGURE 12

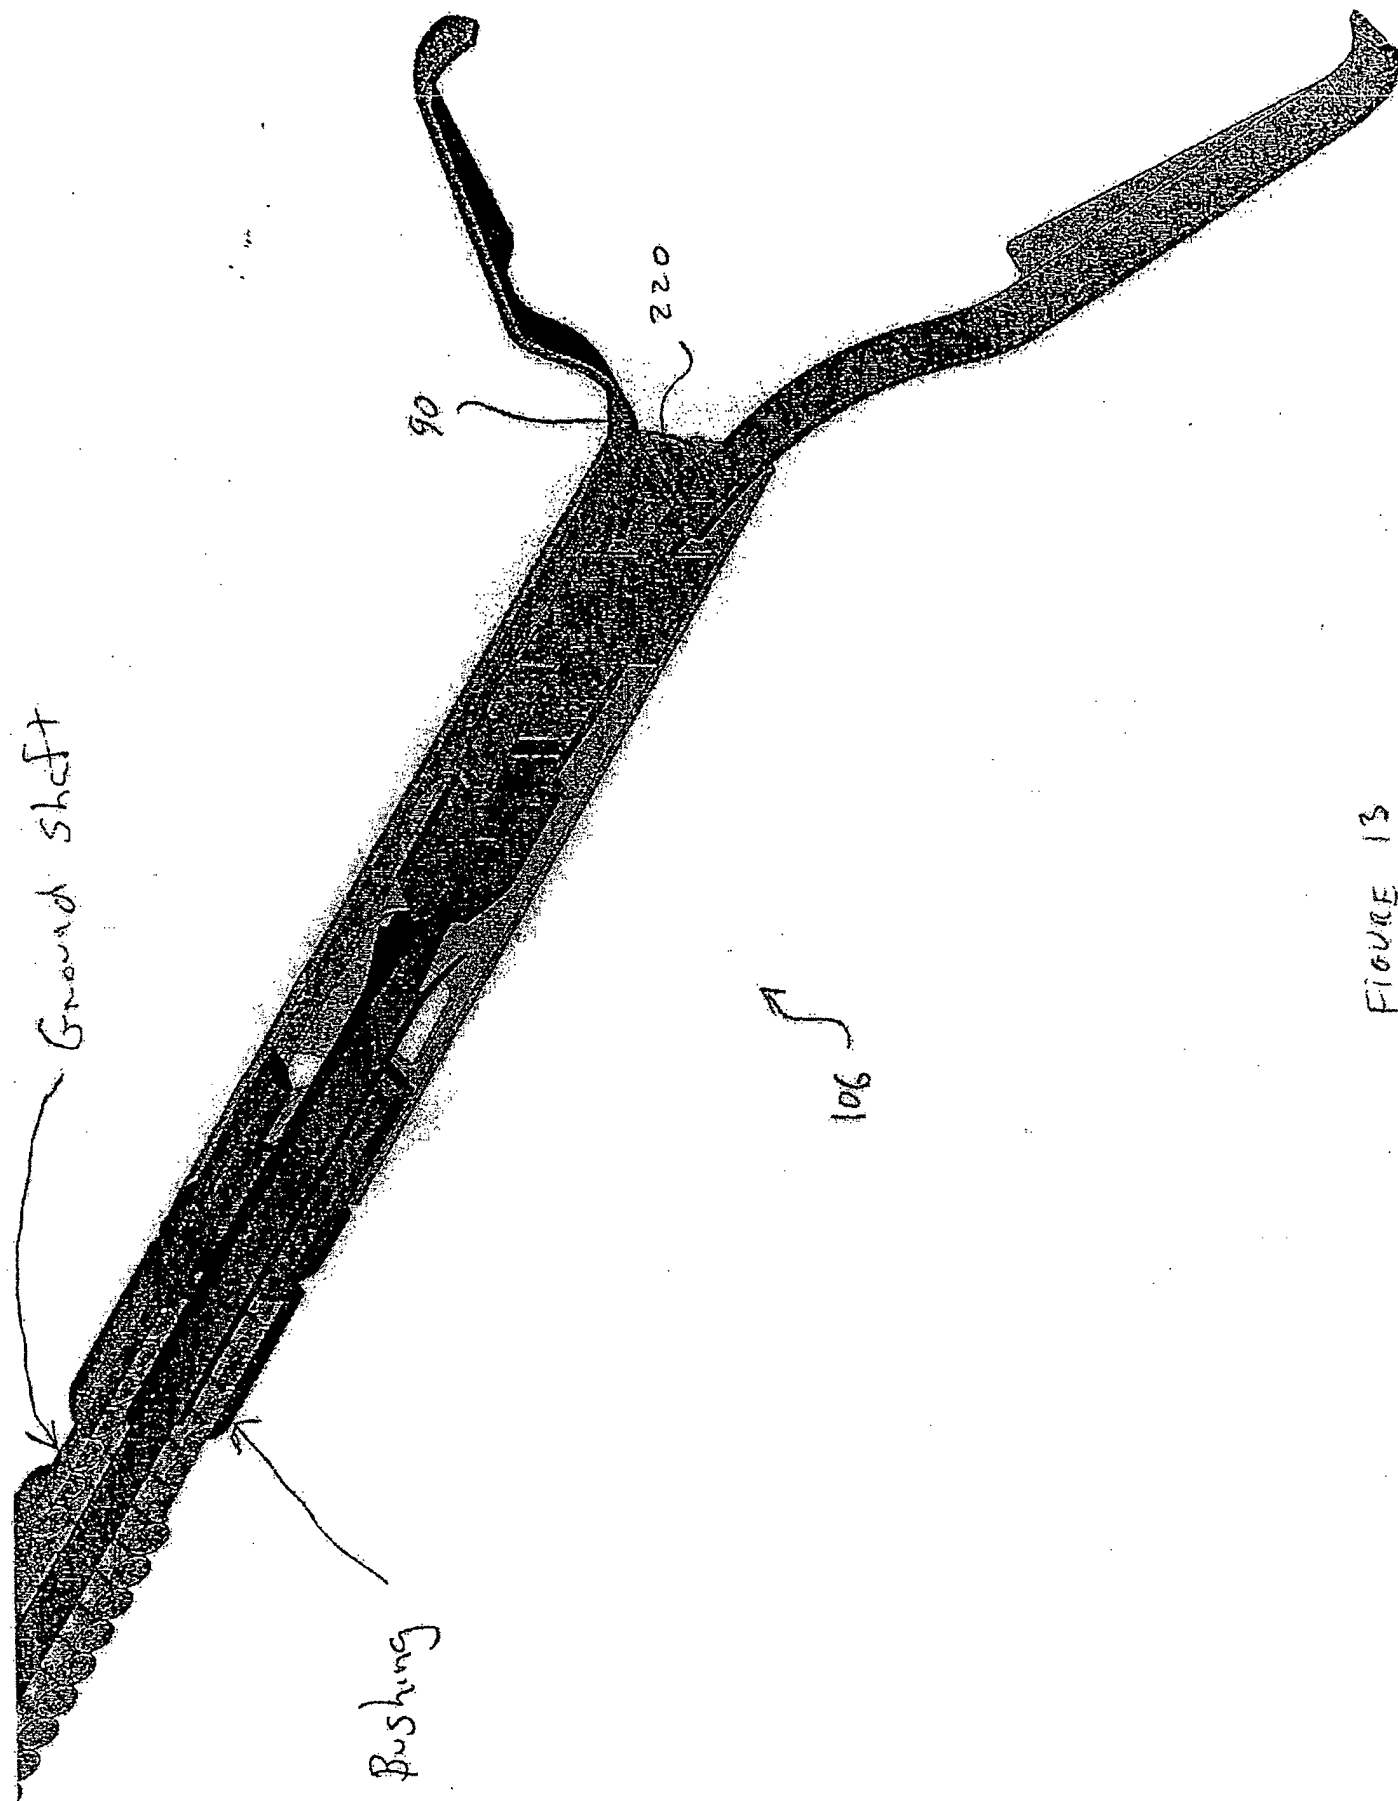
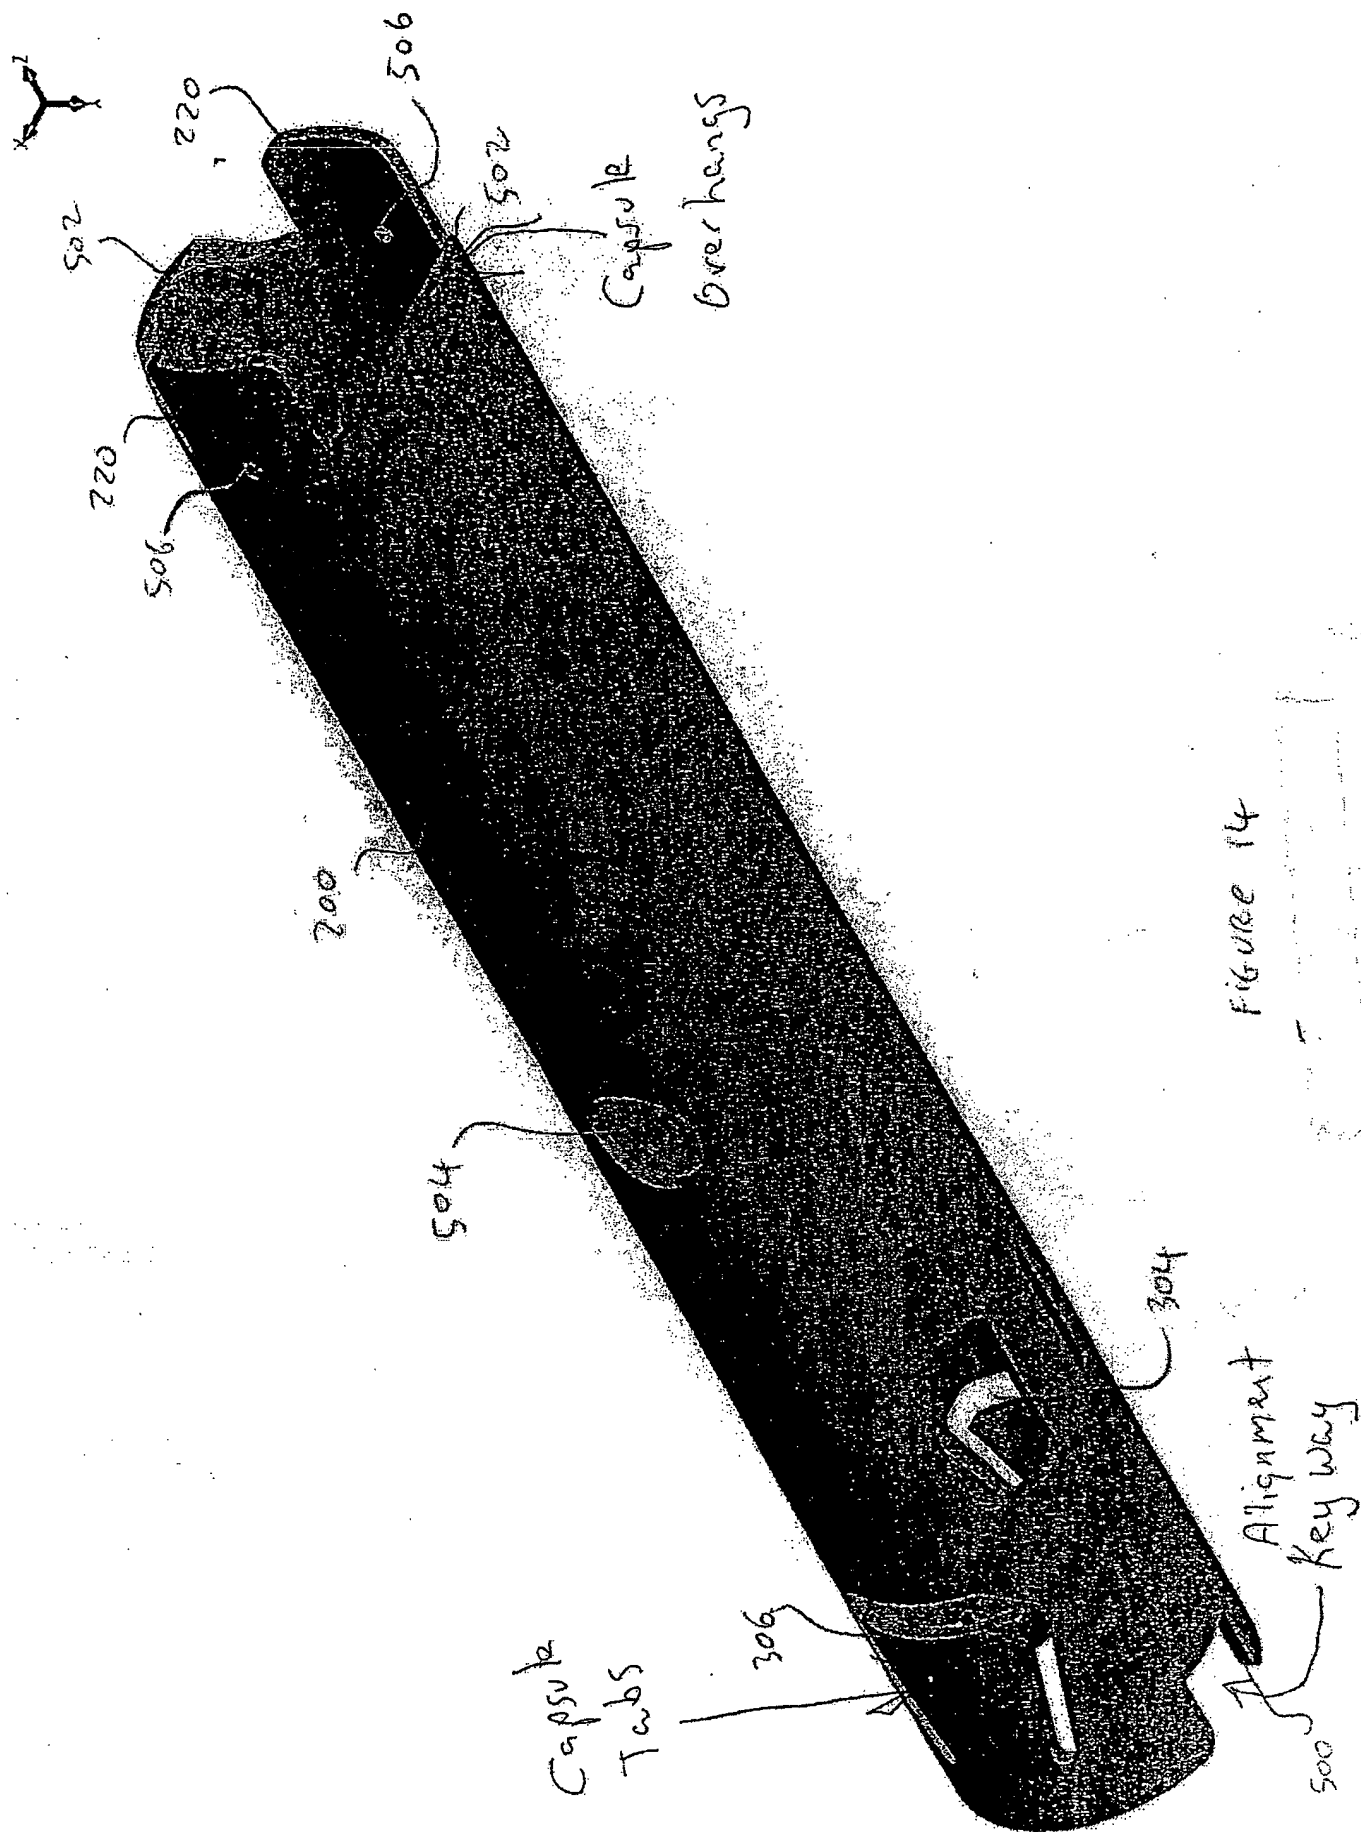


FIGURE 13



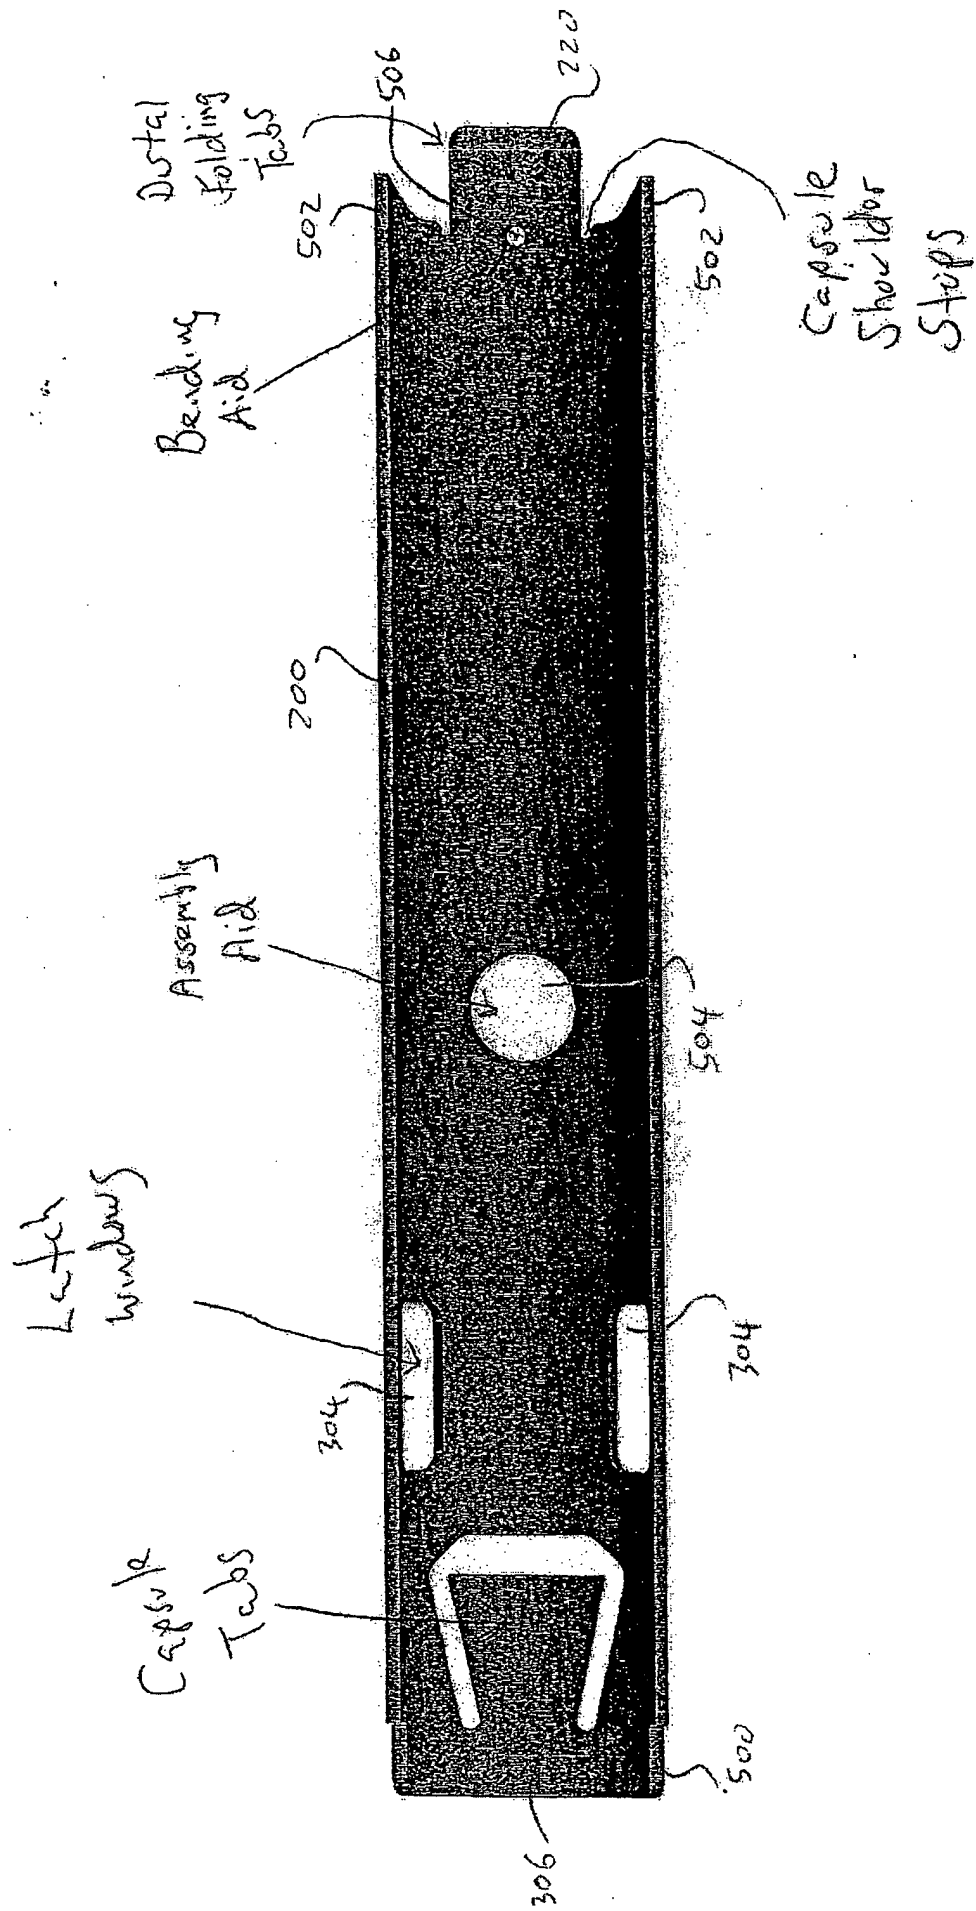


FIGURE 15

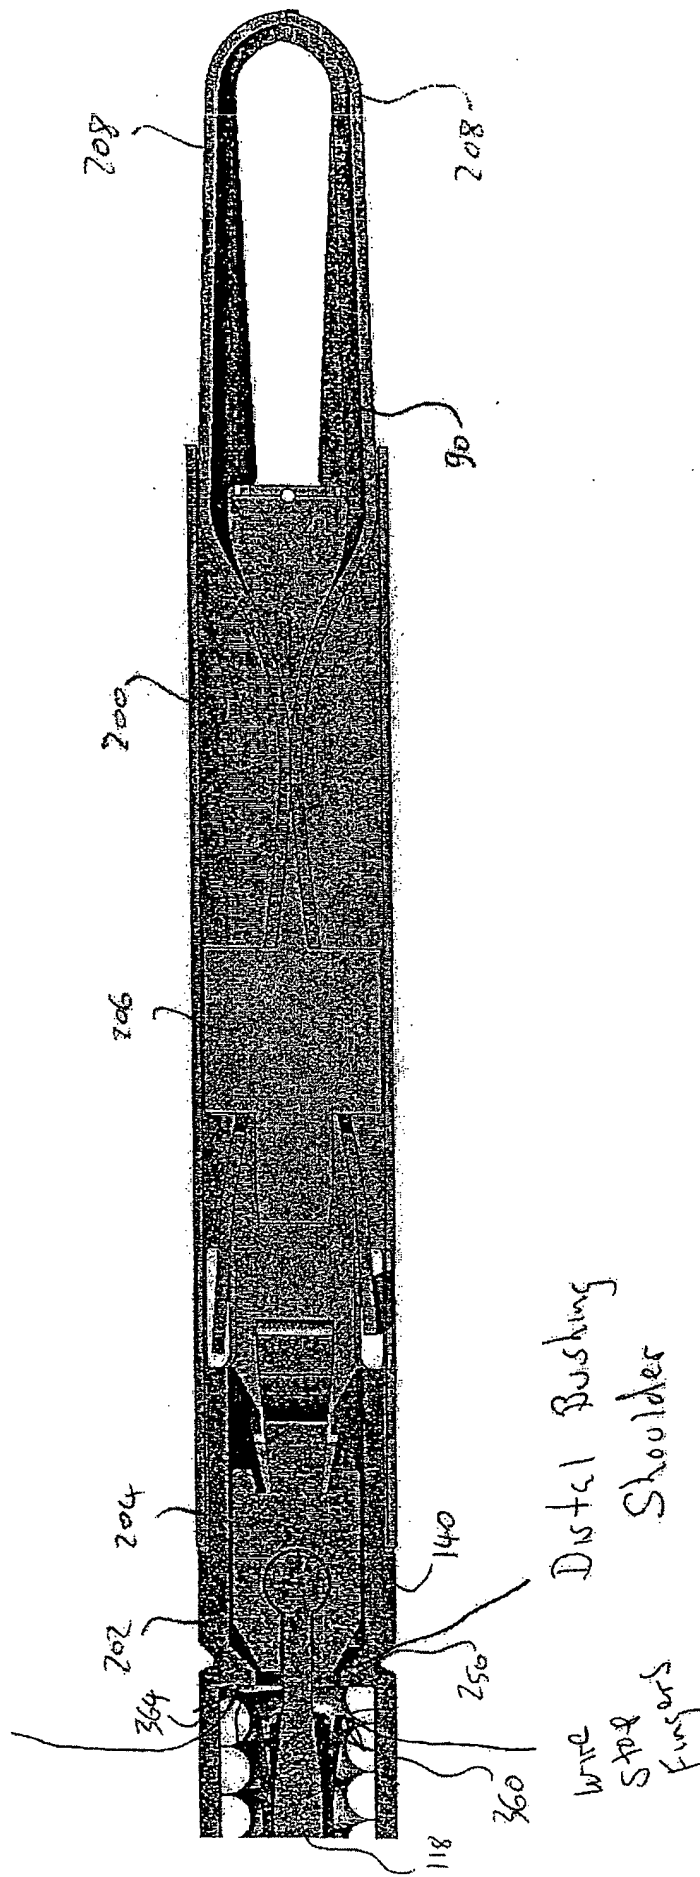


FIGURE 16



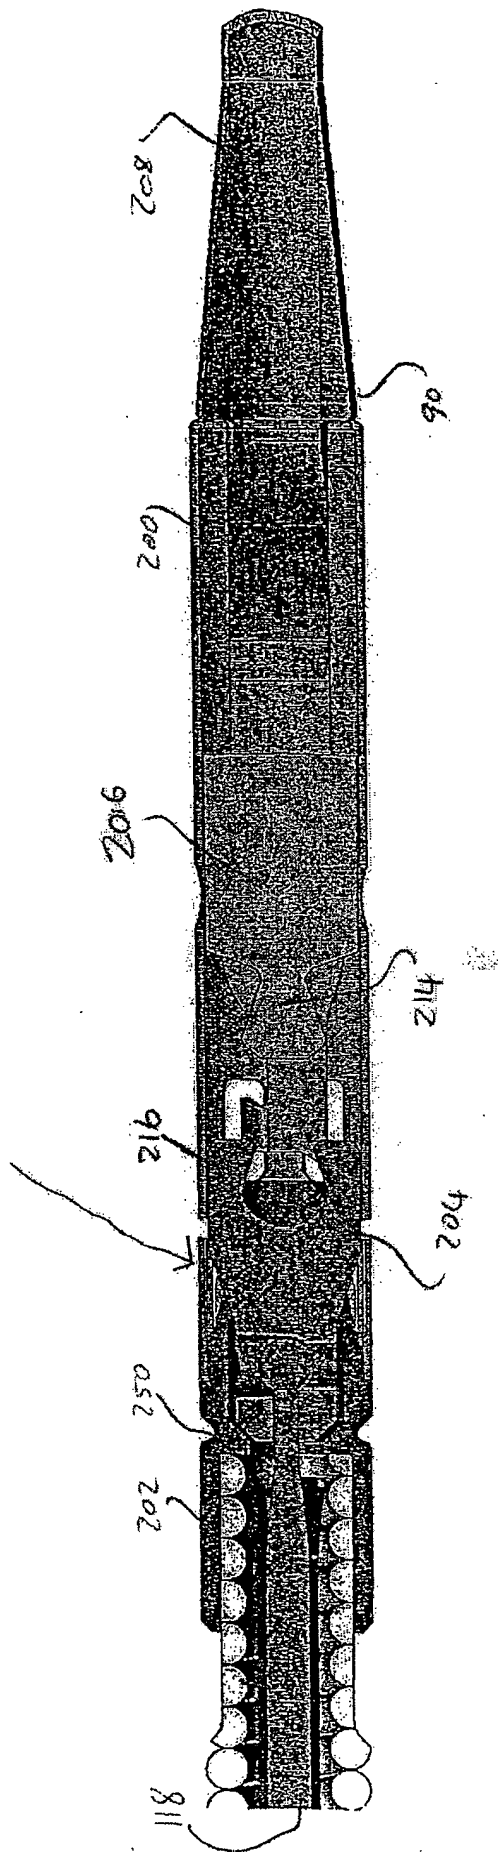


FIGURE 17

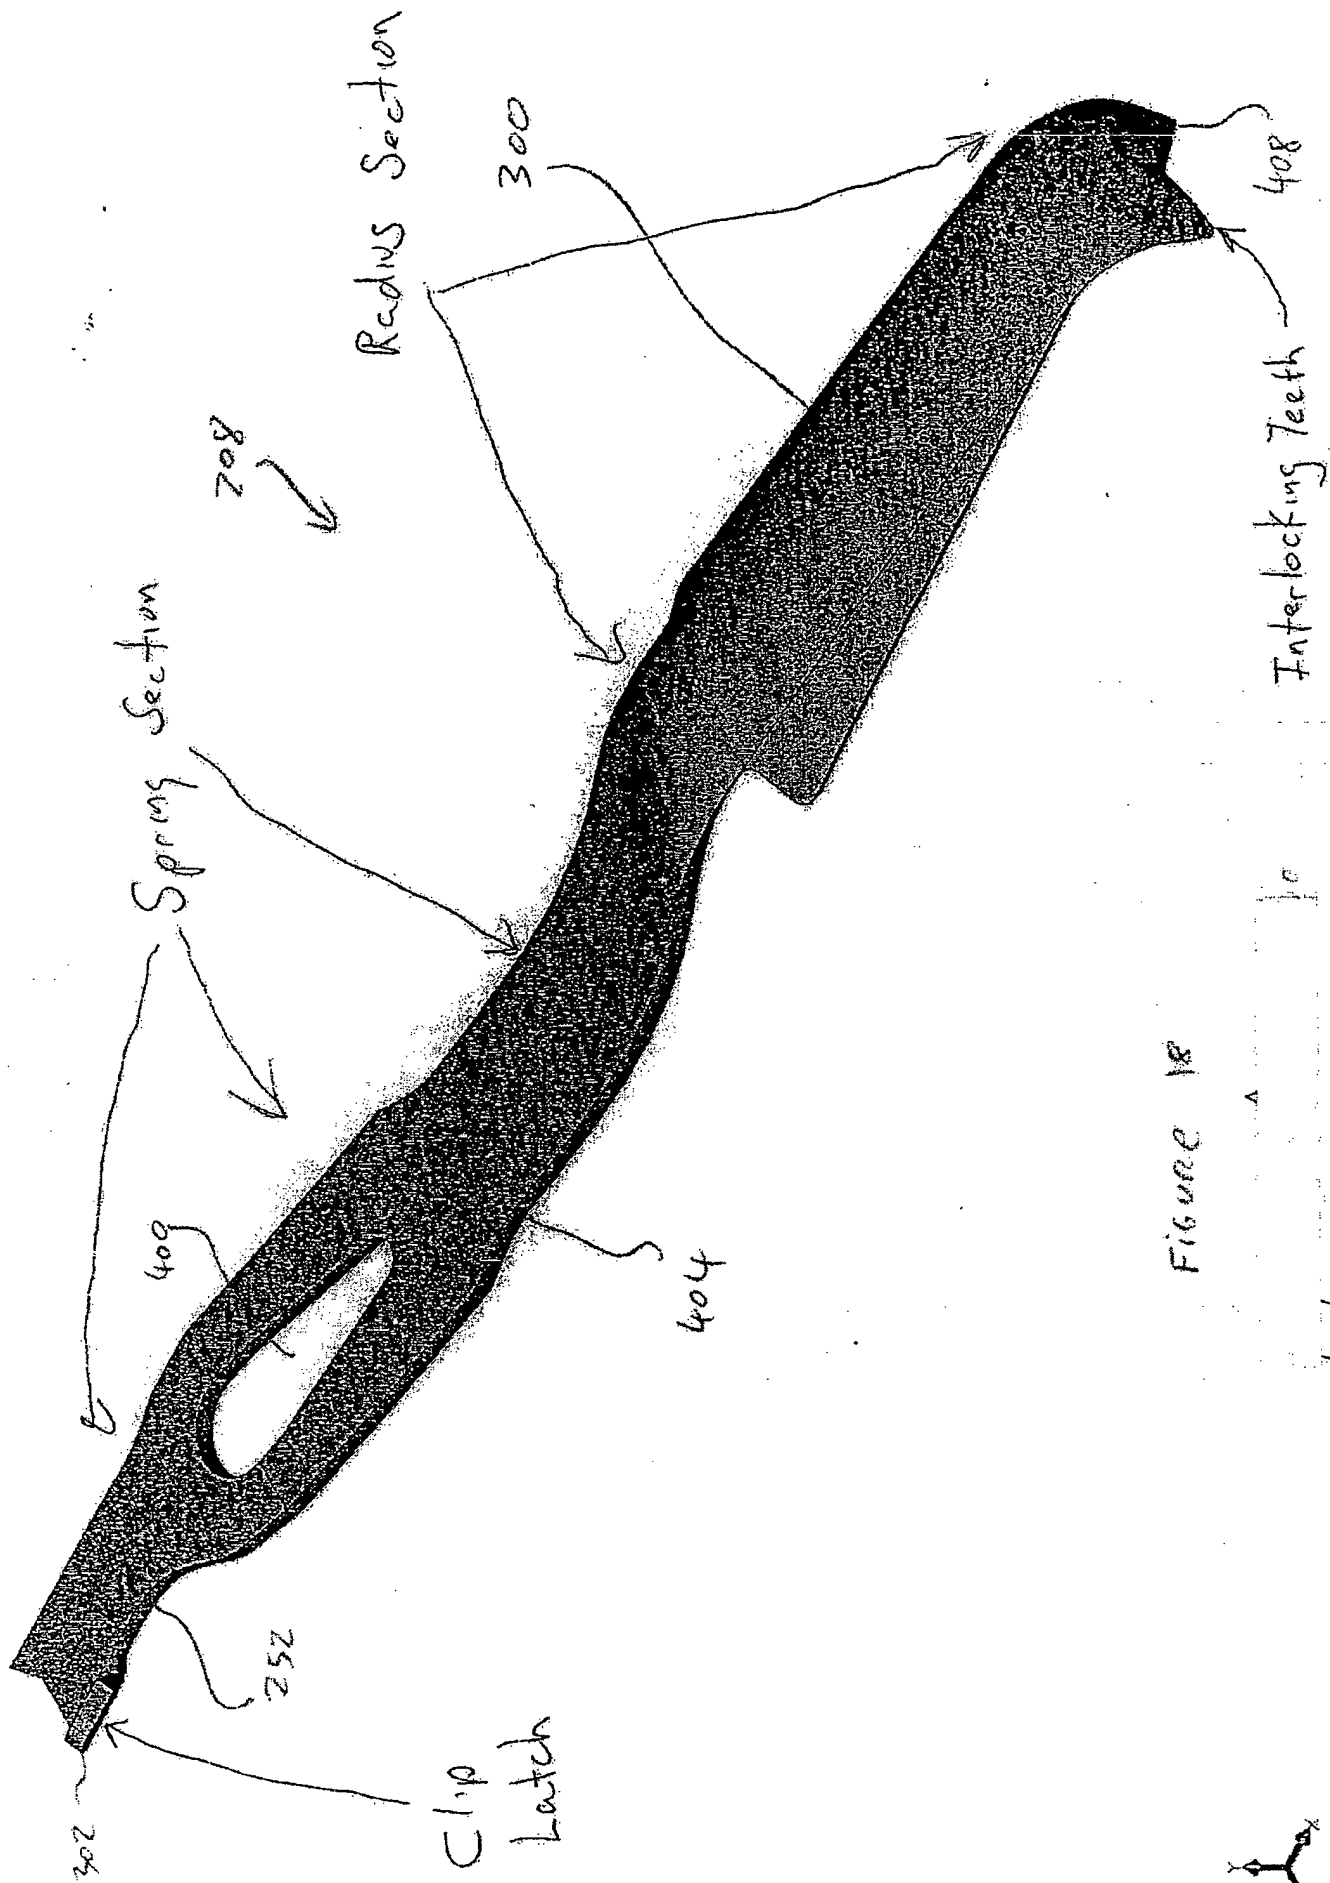


Figure 18

Clip stop shoulders

308

300


404

352

302

Tear Drop Keyway

FIGURE 19

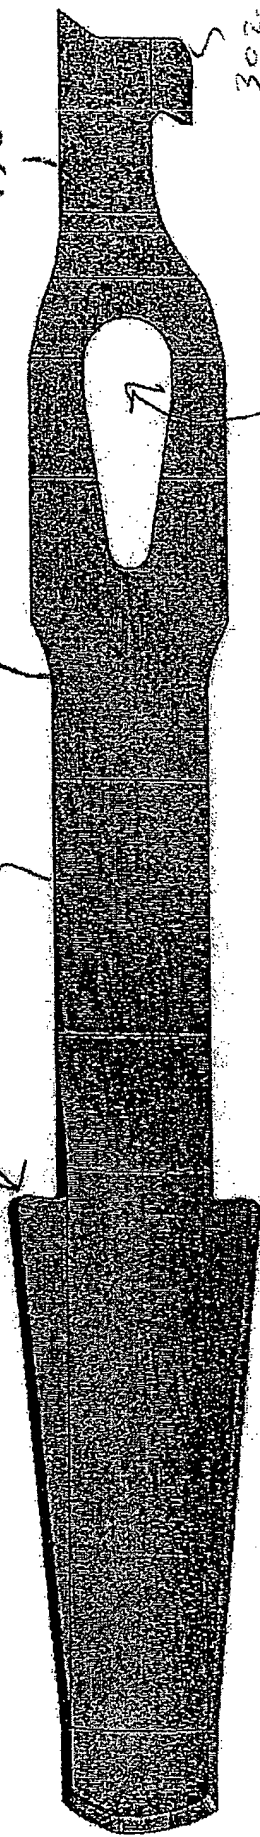

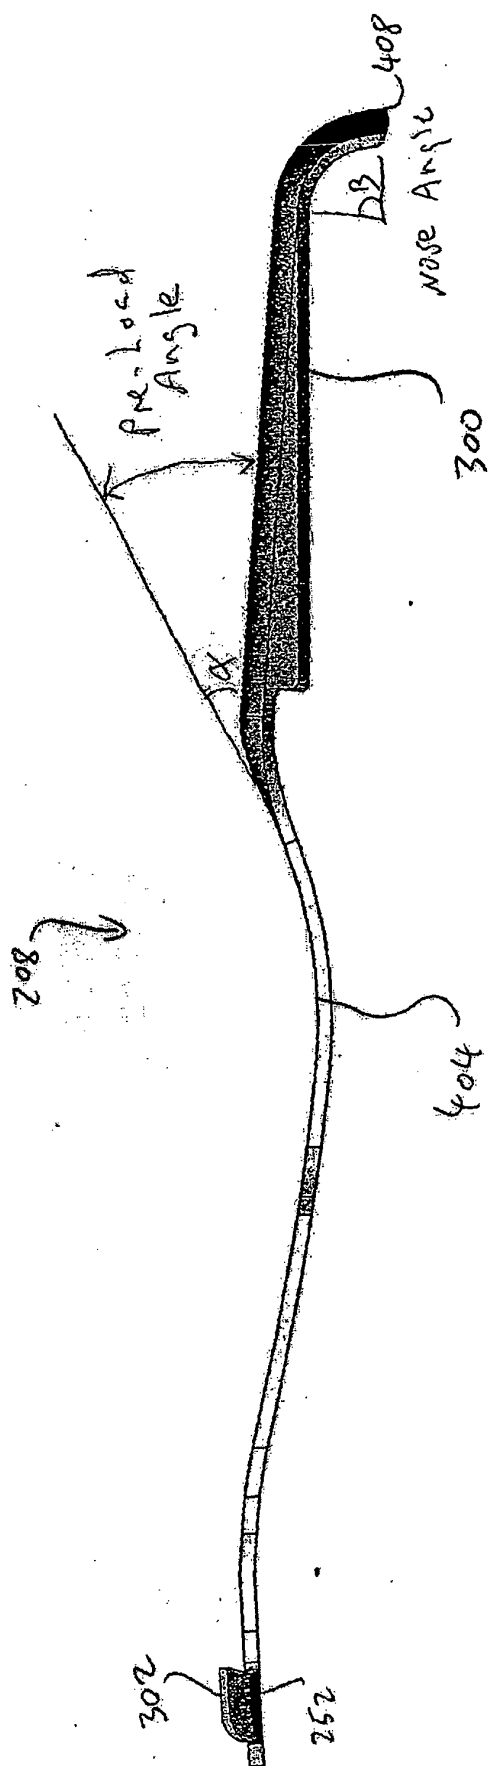


FIGURE 20

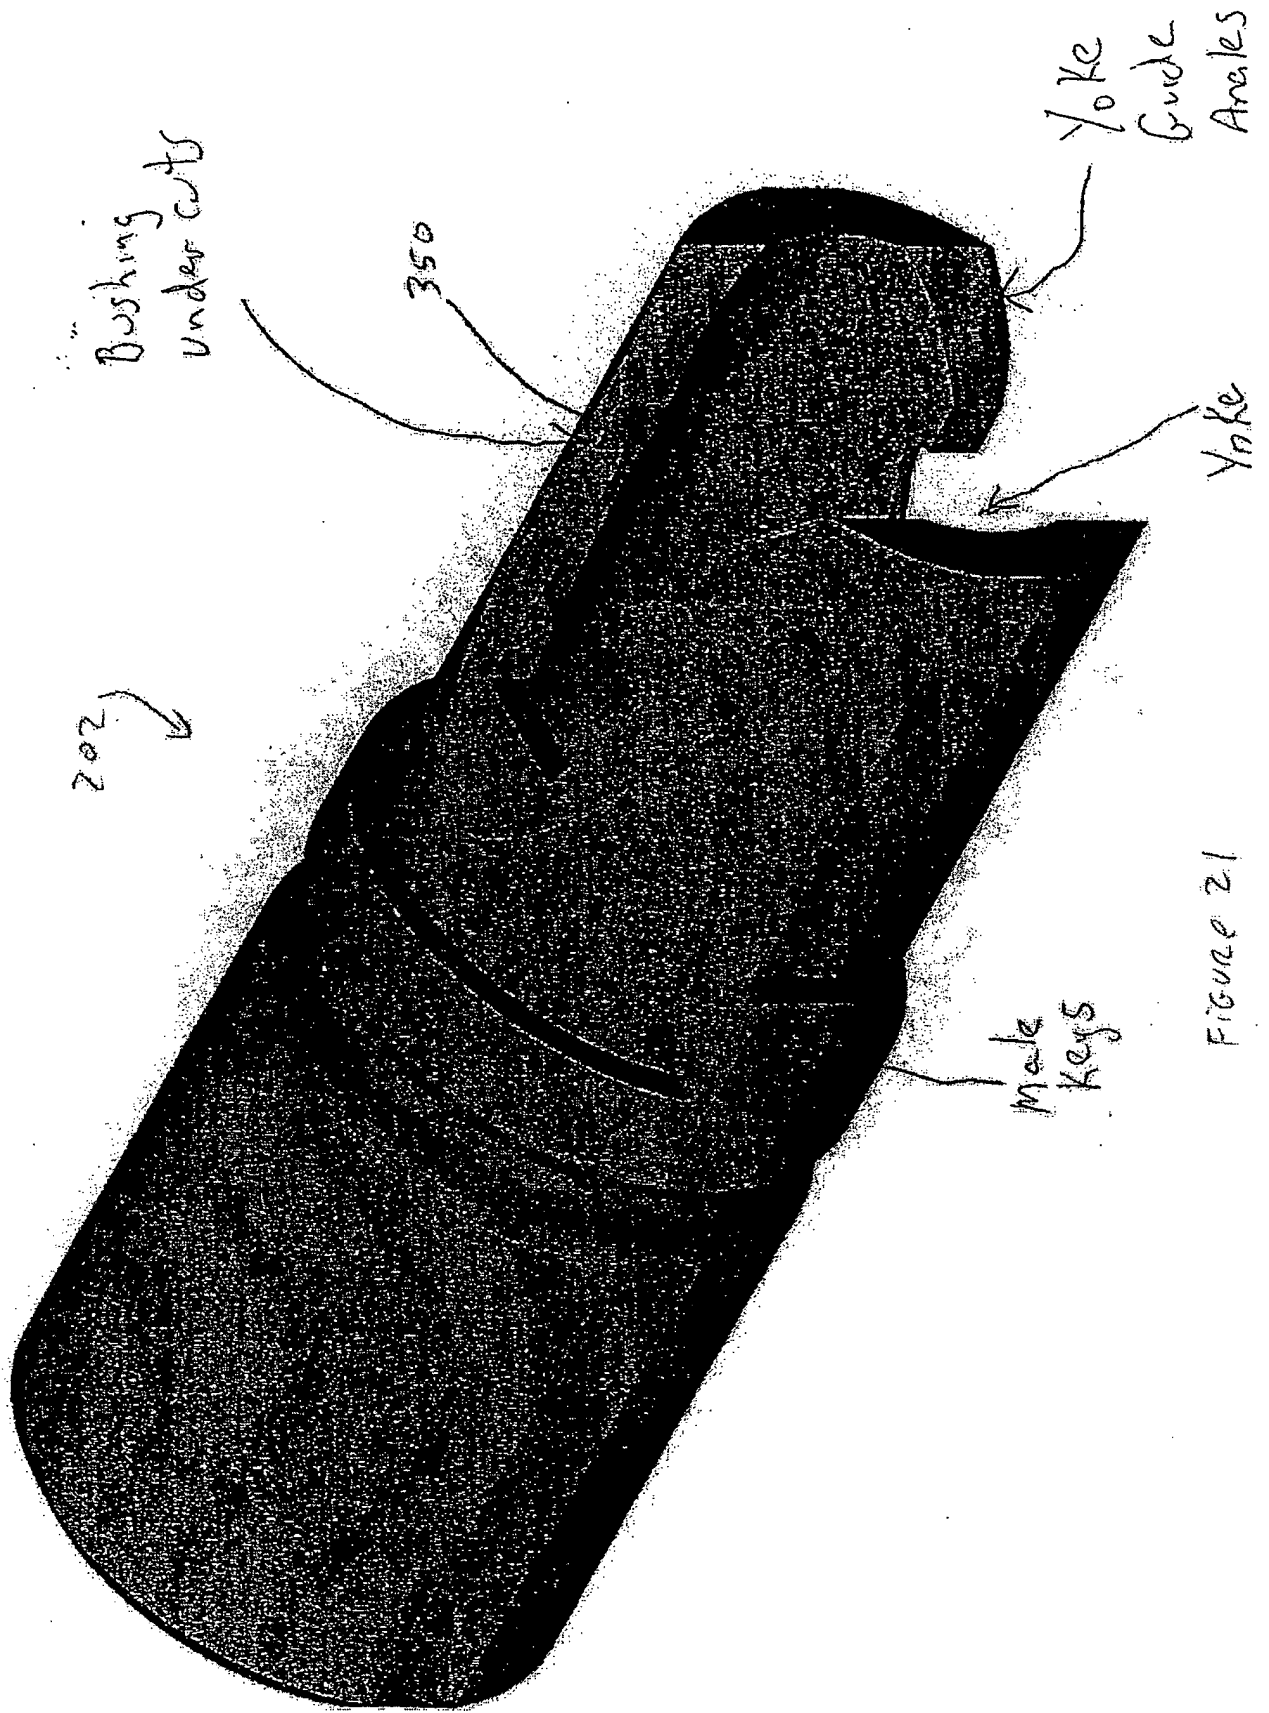


Figure 21

Distal  
Bushing  
Shoulder


202

350

Proximal  
Bushing  
Shoulder

364

FIGURE 22

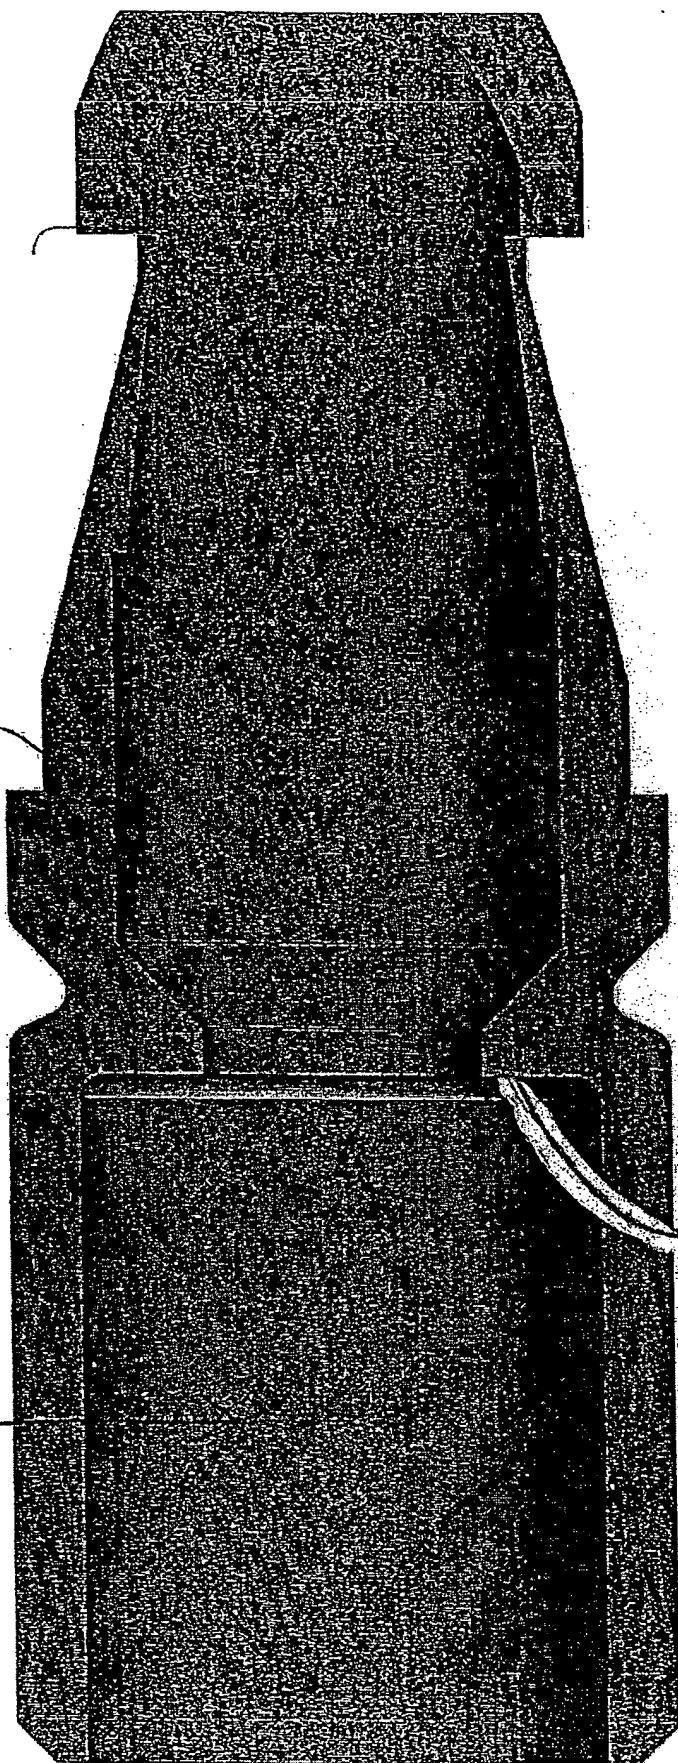

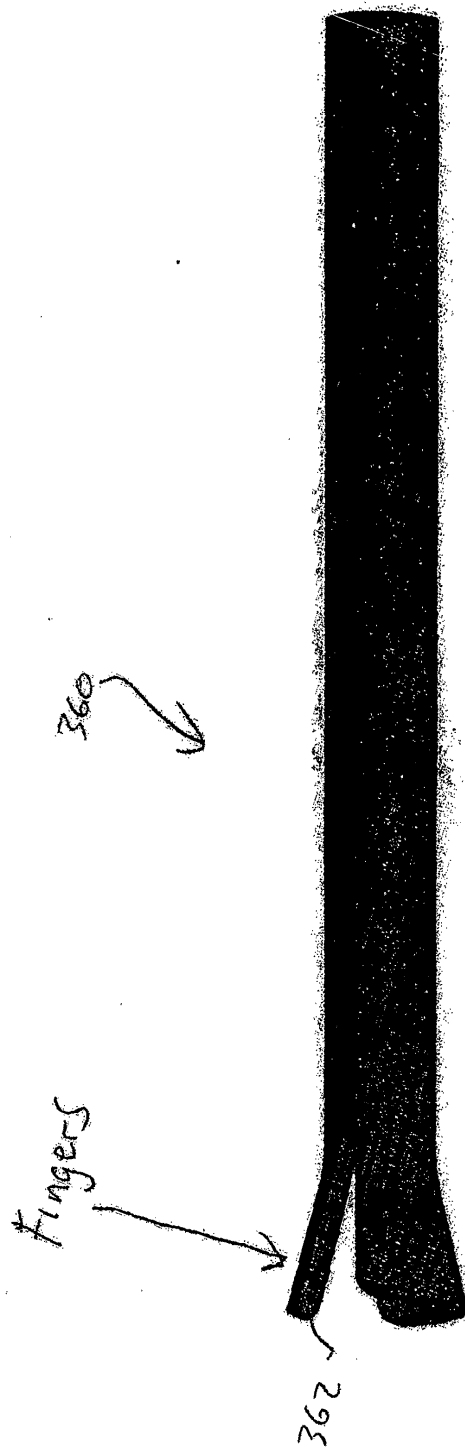


FIGURE 23

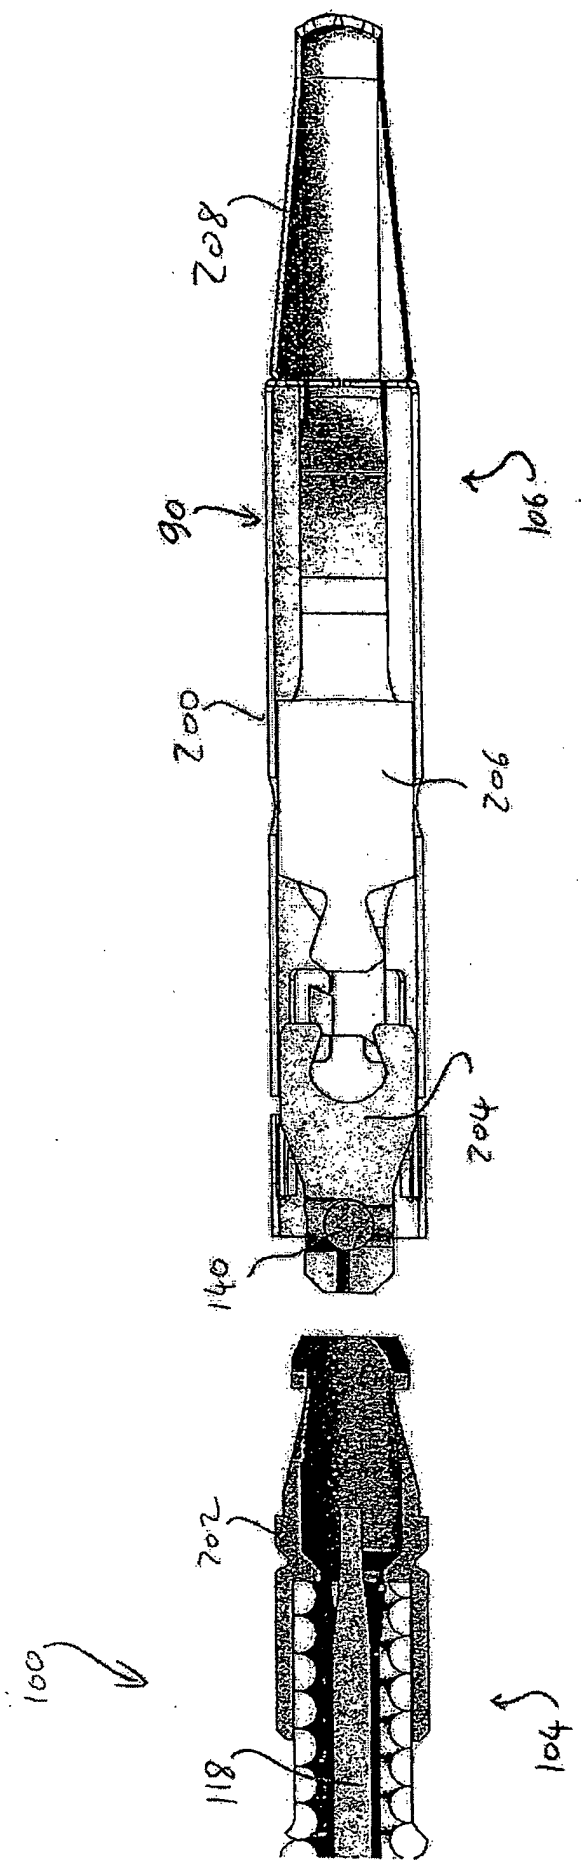


FIGURE 24



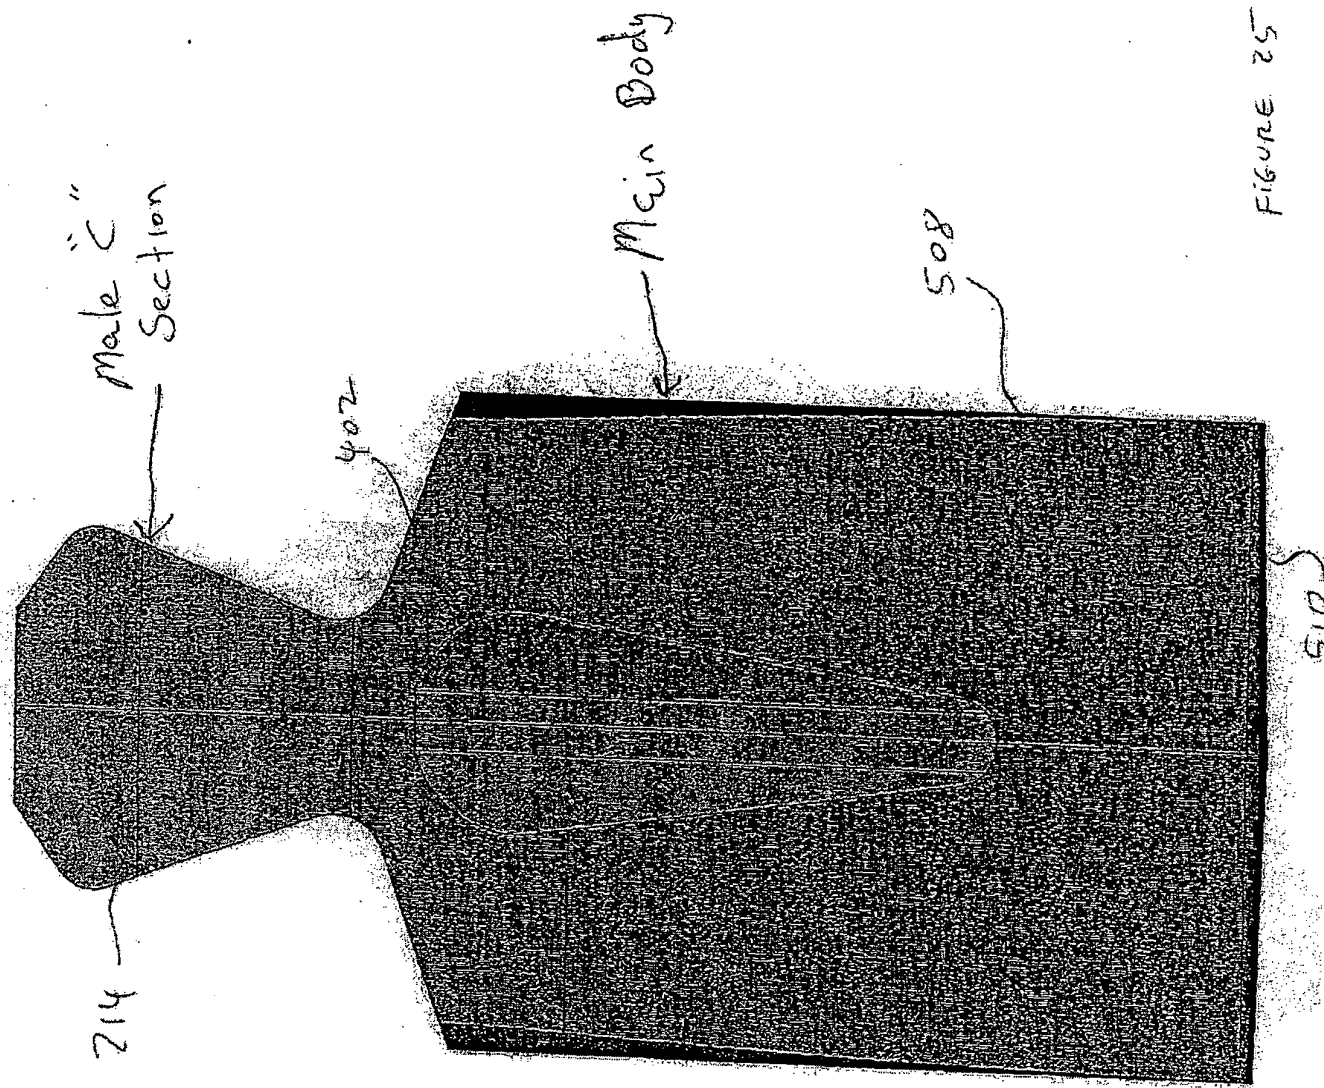
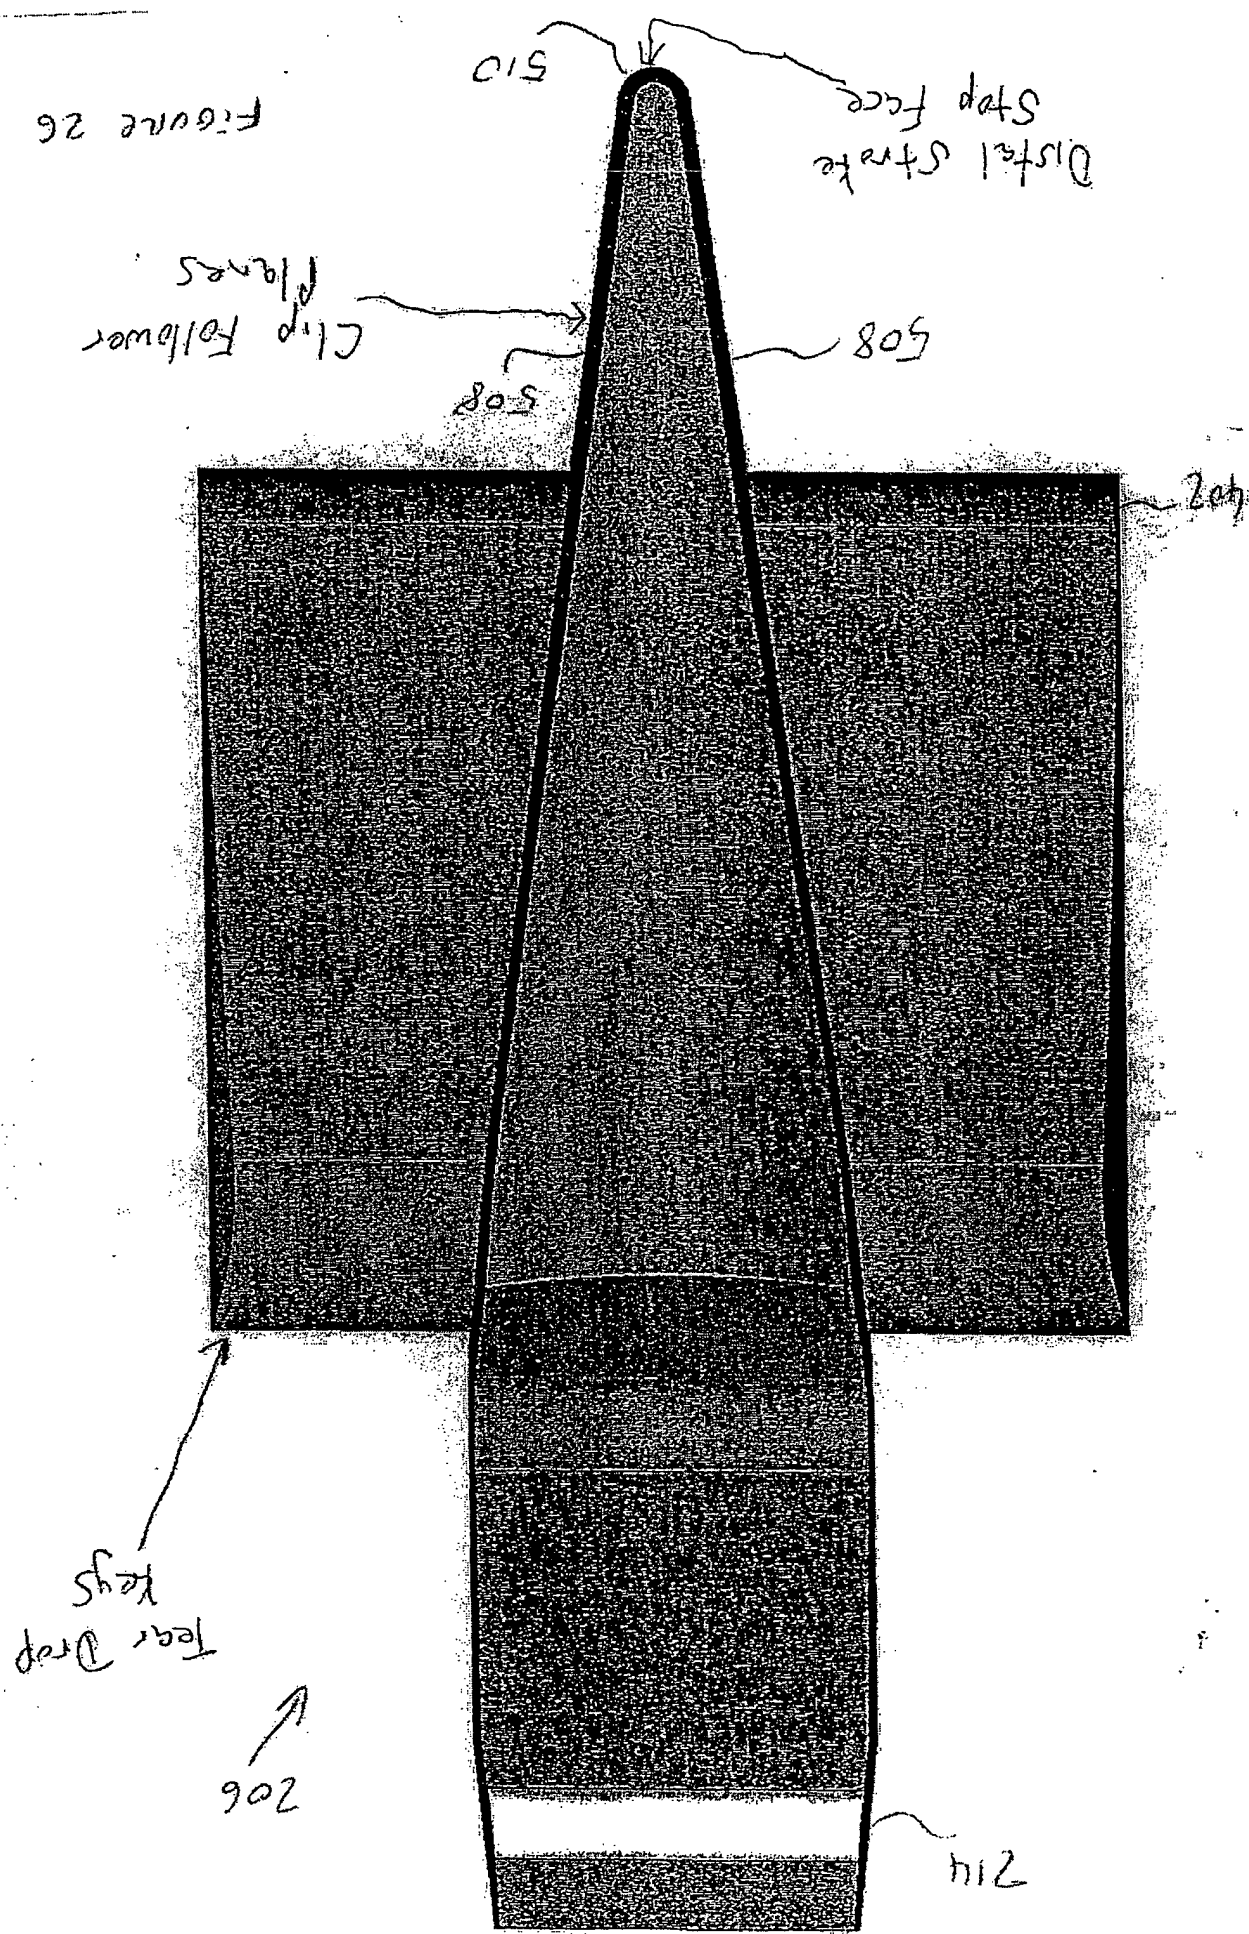


FIGURE 25

Figure 26



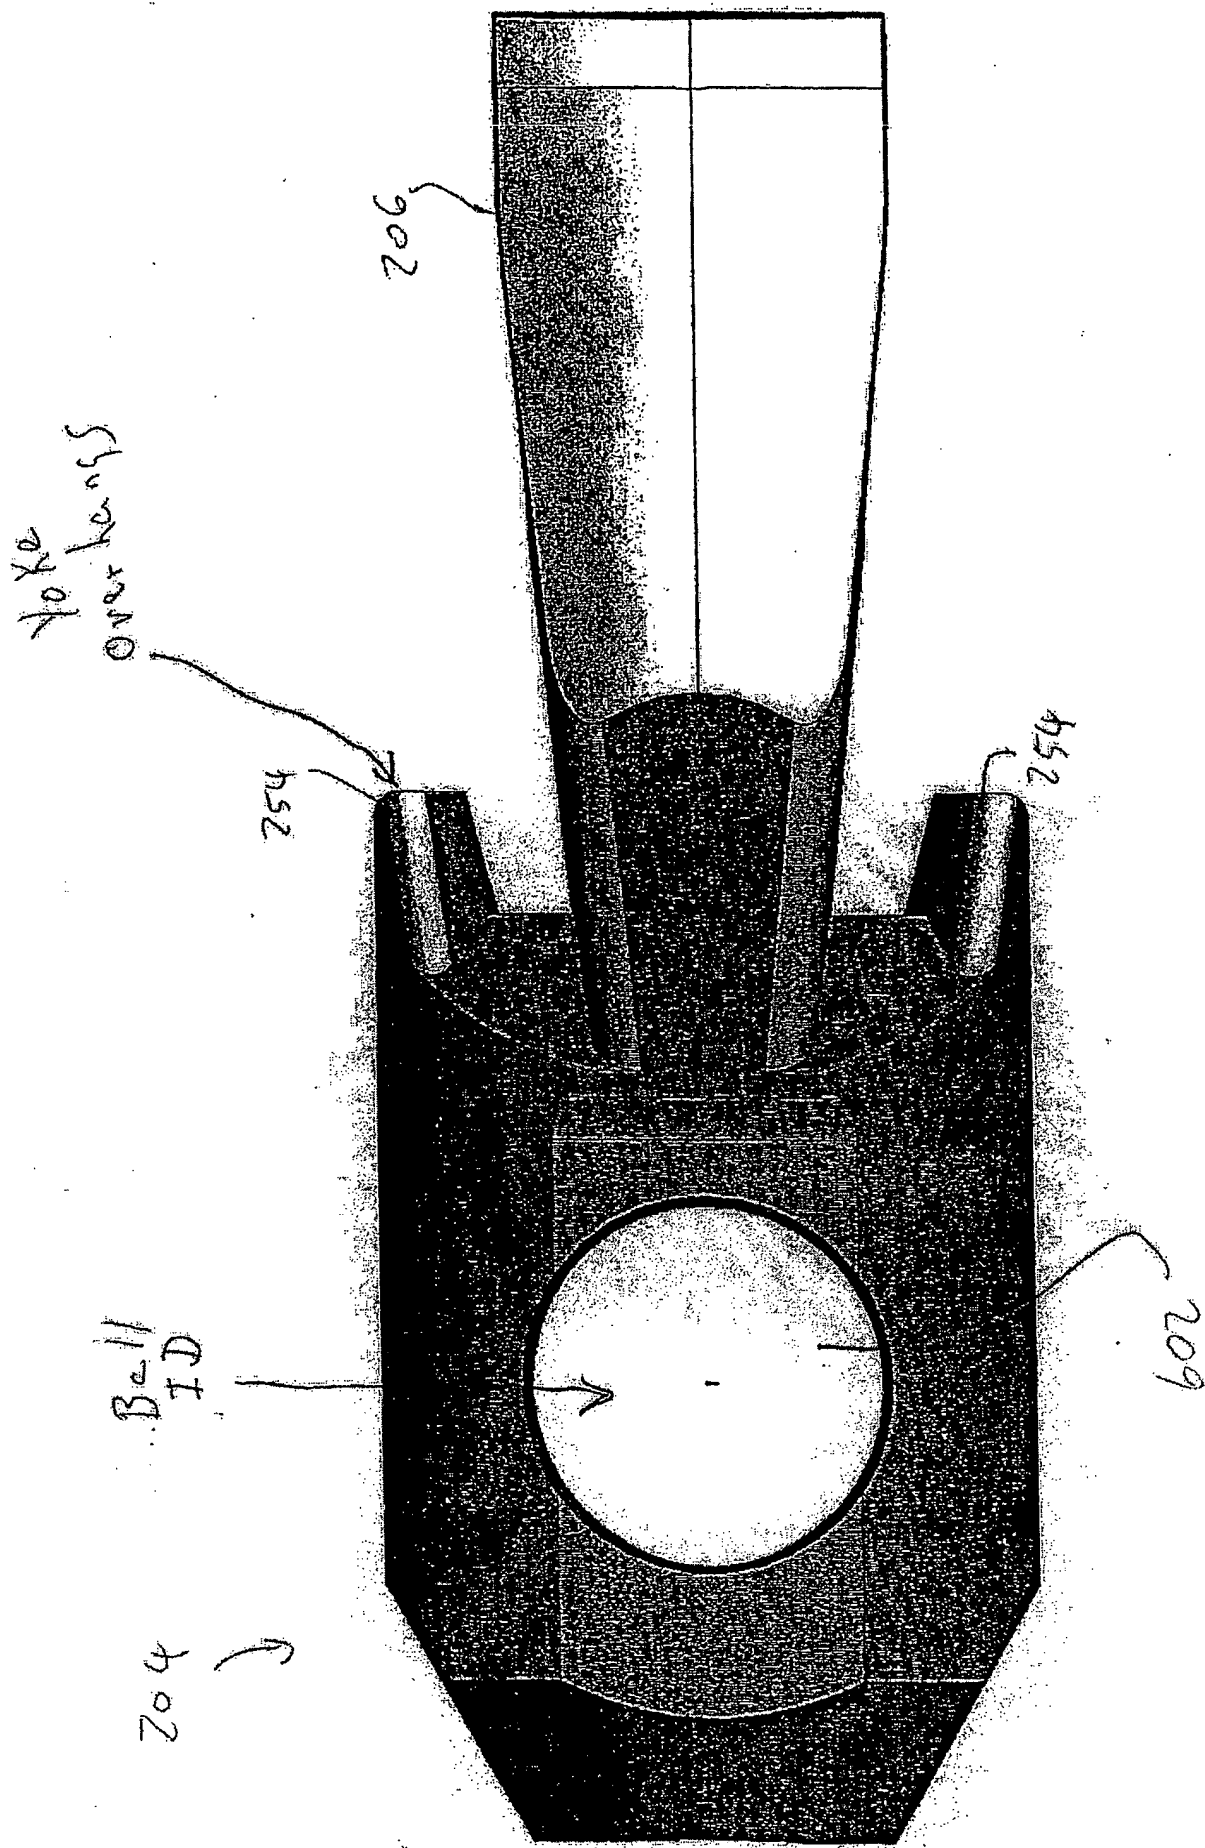


FIGURE 27

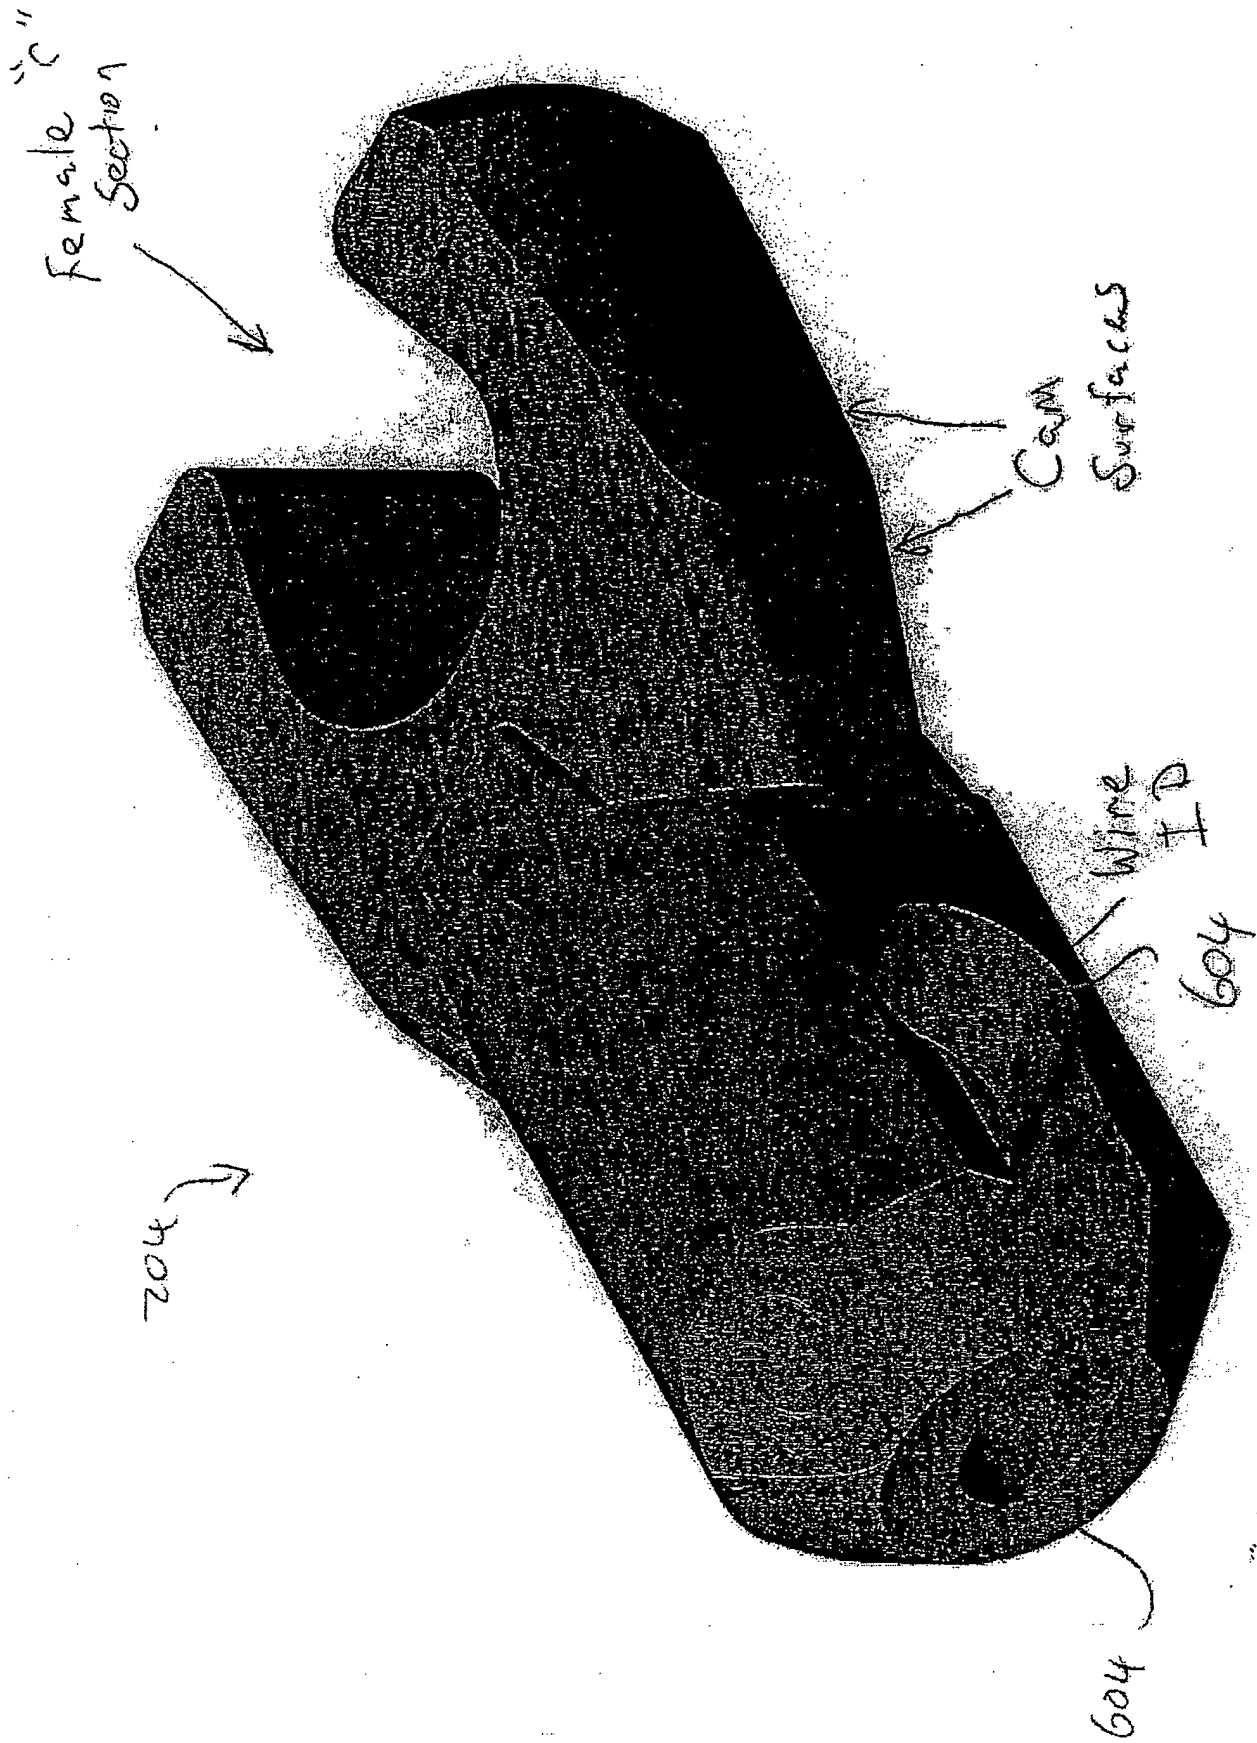


FIGURE 28

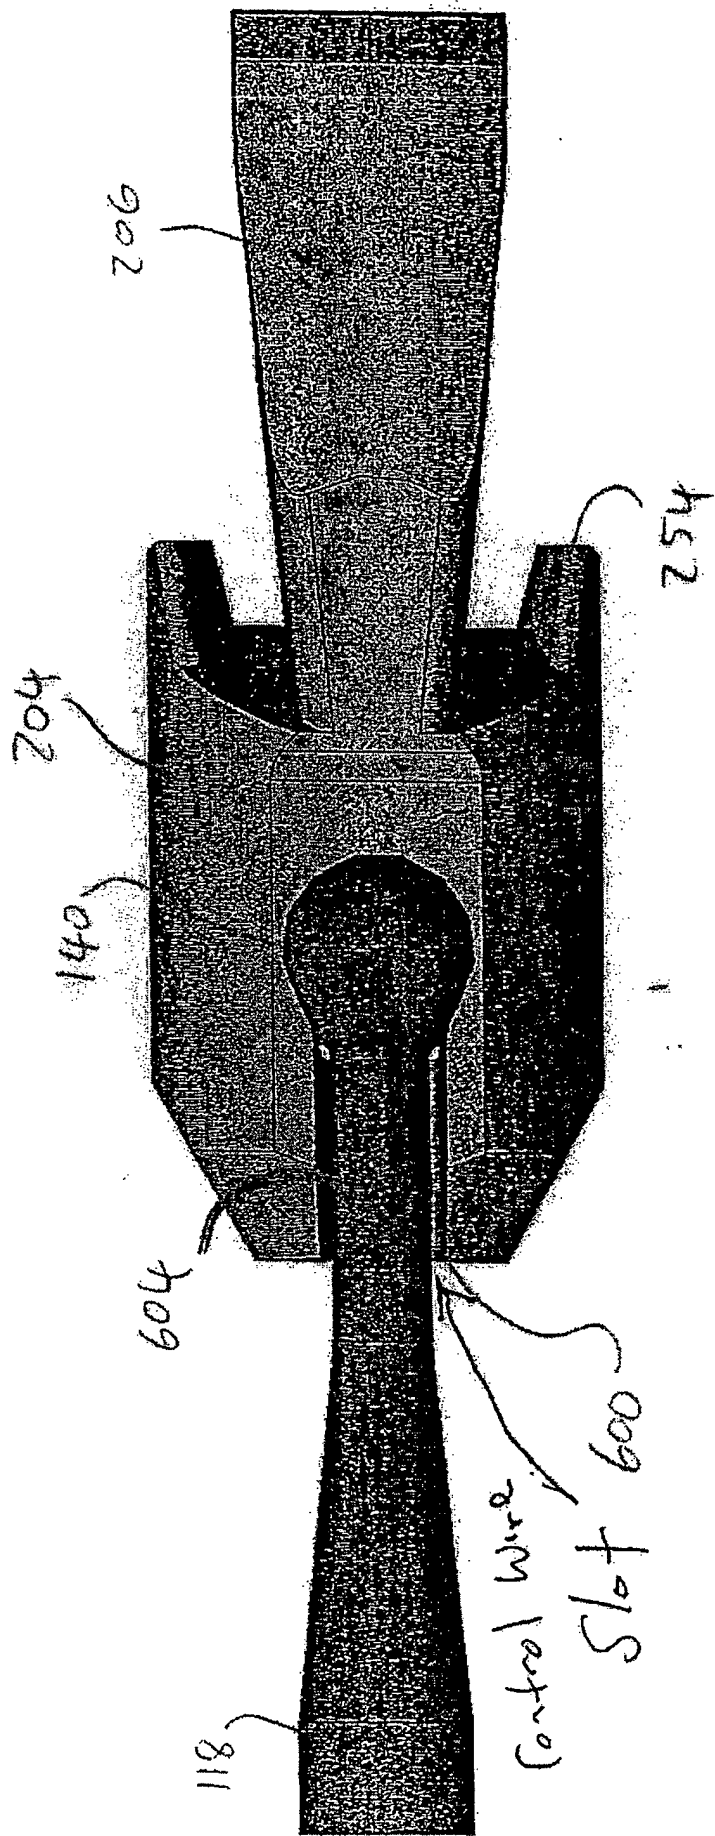


FIGURE 29